

6. Seek up: Select to view the next DVD chapter or the next chapter of the video media.
7. Select to pre-stop playback. A second touch will stop and reset the DVD.
8. Select to start/restart play.
9. Seek down: Select to view the previous DVD chapter or the previous chapter of the video media.

**Note:** For information on the use of the audio/video controls on the audio unit and steering wheel, see **107, AUDIO/VIDEO CONTROLS**.

## VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving, the video picture will automatically be inhibited. The Touch screen will display the **My video** screen and the relevant safety message will be displayed.

## FULL SCREEN VIEW

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3**, **16:9**, or **Zoom** option, to magnify the picture.