

# Wheel changing

Lower the jack, then tighten the wheel nuts fully, in the same sequence shown. Do not overtighten by using foot pressure or extension bars on the wheel nut wrench.

At the earliest opportunity, have the wheel nuts tightened with a torque wrench to 92 lb.ft (125 Nm).

This torque must not be exceeded.

## **WARNING**

**Traction devices, such as snow chains, cannot be used with a temporary spare wheel.**

## **IMPORTANT – USE OF SPARE TIRE**

### **WARNING**

**Adhere to the instructions on the temporary spare warning label, affixed to the wheel.**

### **WARNING**

**Where fitted the temporary use spare wheel is FOR TEMPORARY USE ONLY. Drive with caution while the temporary spare wheel is fitted. Make sure that an original size wheel and tire are fitted as soon as possible.**

### **WARNING**

**Do not fit more than one temporary spare wheel on the vehicle at any one time.**

### **WARNING**

**Do not exceed 50 mph (80 km/h) while the temporary spare wheel is fitted.**

### **WARNING**

**The tire pressure in the temporary spare wheel should be 60 psi (4.2 Bar/420 kPa) and cannot be repaired.**

### **WARNING**

**Dynamic Stability Control (DSC) must be switched on while the temporary spare wheel is in use.**