


LUGGAGE COMPARTMENT EMERGENCY RELEASE

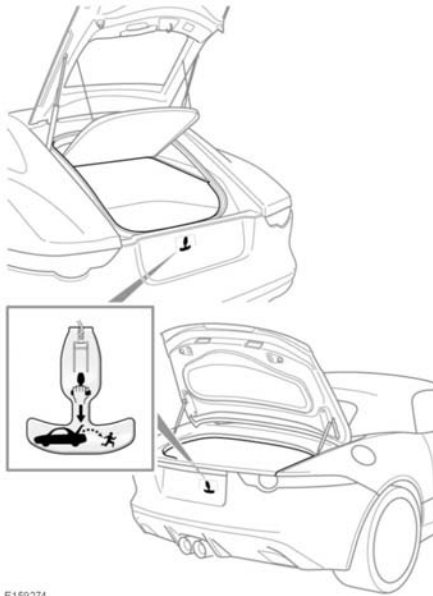


E159274

The mechanical Luggage compartment release provides a means of escape in the event of someone being locked in the Luggage compartment. Adults are advised to familiarize themselves with the operation of the release handle.

The release handle glows in the dark and is located inside the Luggage compartment, as illustrated. To open the Luggage compartment from the inside, pull the handle while pushing the Luggage compartment lid/tailgate upwards.

Return the handle to its stowage position after use.

LUGGAGE COMPARTMENT COVER

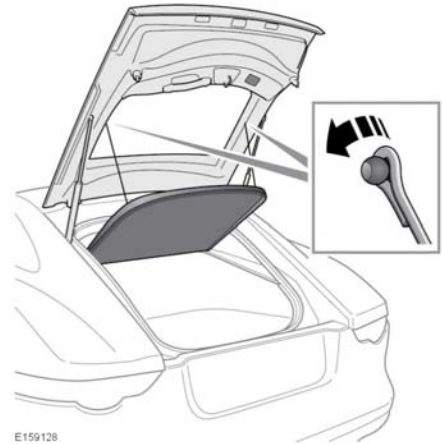

E159128

The Luggage compartment cover will lift and close with tailgate movement, unless the left and right luggage compartment straps are released from the tailgate pins, as illustrated.

⚠ WARNING

Never place objects on top of the load space cover. During an accident or sudden maneuver, loose objects can cause serious injury or death.

The Luggage compartment cover can be removed, if required.

1. With the tailgate open, release the left and right Luggage compartment straps from the tailgate pins.
2. Pull the Luggage compartment cover rearwards, to release the retaining brackets on the edges of the cover from the pins on the Luggage compartment side trim.

Note: *Installation of the luggage compartment cover is the reverse of the removal procedure.*