


## PORTABLE MEDIA CONTROLS

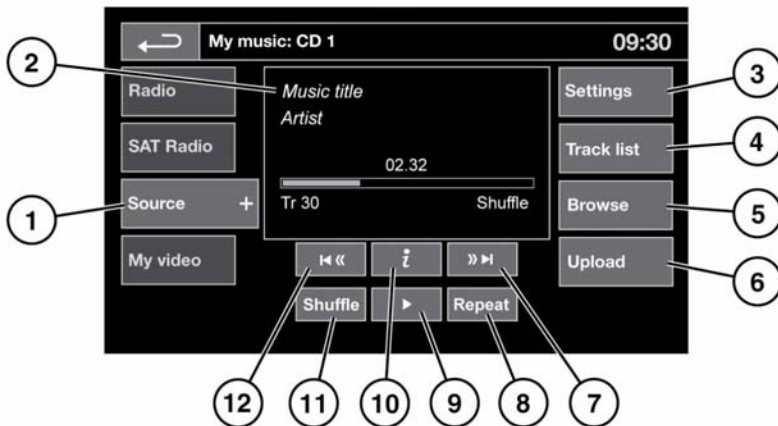

E151295

### **⚠ WARNING**

Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

### **⚠ WARNING**

Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

Portable media includes **CD**, **iPod**, **USB**, **AUX** and **Bluetooth®** devices. The full infotainment system also includes Stored CD.

1. Touch **My music** to display the **Source** soft key. Touch **Source** to display all of the portable media options. Select an option.

*Note: Sound quality and volume levels available from devices connected to the auxiliary input may vary widely.*

2. Display of information about the current track, including elapsed run-time. Some of this information is also displayed in the Instrument panel.

*Note: Only connected devices that support ID3 shall have the information displayed.*

3. **Settings:** For MP3 recorded media, you can select the number of list entries that are skipped when you use the page up/down arrows, when navigating a list.
4. **Track list:** Select to view the current CD or Stored CD track list. Select a track to start playback.
5. **Browse:** (**iPod**, **USB** and **Stored CD** modes only).
  - Select to view the contents of the connected device which are displayed as dictated by the file structure.
  - Select a file to start playback (Browse view will remain). Select a folder or sub-folder to view their contents.
  - To return to the controls menu, select the back soft key.

**6. Upload:** Applicable to the Stored CD menu only.

Select to view and manage the CDs loaded onto the CD store.

- Select **Upload** alongside an empty slot to upload the current CD. There are 10 slots available.
- If the CD store is full, select **Replace** to overwrite an existing CD.

In each case, a confirmation pop-up will appear. Select **Yes** to continue.

***Note:** Loading time is dependent on content type. A % count up is displayed. Other features can be selected while upload is in progress.*

**7. Skip/Scan forwards:**

- Touch and release to skip to the next track.
- Touch and hold to scan forwards through the current track. Play will resume when the soft key is released.

**8. Repeat:**

In **CD** mode:

- Touch and release to repeat the current track continuously until Repeat mode is canceled. **Repeat track** is displayed.
- Touch and release again to repeat the current Stored CD (or folder for MP3 discs) continuously until Repeat mode is canceled. **Repeat disc** or **Repeat folder** is displayed.
- Touch and release a third time to cancel Repeat mode.

***Note:** Selecting **Shuffle** will cancel Repeat mode, but **Repeat track** can be selected with Shuffle mode active (cancels the previously selected Shuffle mode).*

In **USB** or **iPod** mode:

- Select to repeat the current track.

- Select again to Repeat the current folder (USB) or to cancel repeat mode (iPod). Select again to cancel Repeat mode in USB.

***Note:** Repeat mode is not available for **Bluetooth®** devices.*

***Note:** Selecting **Shuffle** will cancel Repeat mode.*

**9. Pause/Play:** Select to pause playback. Select again to resume playback.

**10. Information:** More information about the current track.

**11. Shuffle:**

- Touch and release once to play random tracks from the current CD, MP3 folder, USB folder, or iPod playlist. A **Shuffle** message is displayed.
- Touch and release again to play random tracks from CD, MP3 disc, USB folders or tracks on the media device, or tracks loaded onto the CD store. **Shuffle all** is displayed.
- Touch and release again to cancel Shuffle mode.

***Note:** Shuffle mode is not available for **Bluetooth®** devices.*

**12. Skip/Scan backwards:**

- Touch and release within 3 seconds of track playback to skip to the previous track.
- Touch and release after 3 seconds of track playback to skip to the beginning of the current track.
- Touch and hold to scan backwards through the current track. Playback will resume when the soft key is released.

For other relevant controls, see **107, AUDIO/VIDEO CONTROLS**.