

## OPENING THE ROOF

### **⚠ WARNING**

To avoid injury, before opening or closing the convertible roof, make sure that no occupants have any part of their body in a position where it could be trapped.

### **NOTICE**

Do not attempt to operate the convertible roof at temperatures below  $-4^{\circ}\text{F}$  ( $-20^{\circ}\text{C}$ ). This may cause damage to the fabric.

### **NOTICE**

If the convertible roof is operated above 30 mph (50 km/h), there is a risk of damage to the convertible roof.

### **NOTICE**


Do not attempt to open the convertible roof manually, as damage to the linkage mechanism may occur.

### **NOTICE**

Do not place items in the roof stowage well.

**Note:** If roof movement is inhibited, then a warning message will be displayed in the Message center.

**Note:** Make sure that there is a sufficient space above the vehicle before opening or closing the roof. Insufficient space may result in damage to the vehicle

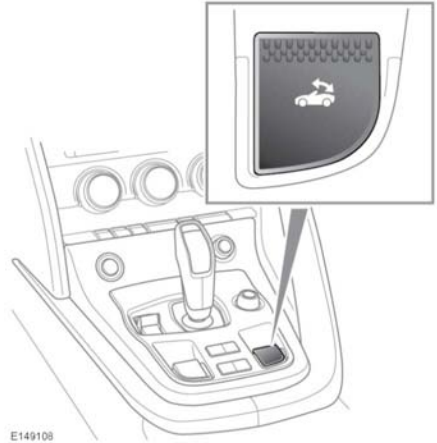

The power-operated convertible roof is controlled by a switch located on the center console, as illustrated. The ignition system must be on. The roof will latch and unlatch automatically. The roof can be operated at speeds below 30 mph (50 km/h). However, for safety it should not be opened or closed when the vehicle is being driven.

1. Make sure that the ignition is on.
2. Press and hold the front of the switch.
3. The door windows will fully open. The roof will unlatch and start to move.
4. When the roof is fully open, an audible warning sounds and a message will be displayed in the Message center.

**Note:** The roof closing panels will automatically close when the roof is in the fully stowed position.

5. Release the switch.

**Note:** If, at any period during the convertible roof opening sequence, the switch is released, all movement of the convertible roof will cease.