


## INSTRUMENT PANEL

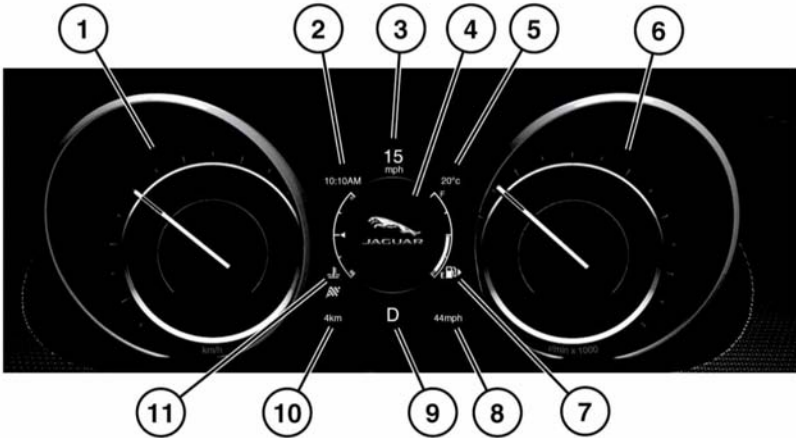

E169135

1. Speedometer.

2. Clock.

3. Current speed.

4. Message center.

5. External temperature.

6. Tachometer.

7. Fuel gauge.

### **NOTICE**

*Never allow the engine to run out of fuel. The resultant misfire can seriously damage the catalytic converter.*

If the amber low fuel warning lamp illuminates, the vehicle should be refueled as soon as possible. The approximate distance that can be traveled on the remaining fuel can be viewed via the Trip computer range function.

As a reminder for the location of the fuel filler, there is an arrow head symbol, next to the fuel pump symbol, pointing to the relevant side of the vehicle.

8. Date or Trip distance.

9. Gear selector position display.

10. Total distance (odometer).

11. Temperature gauge.

### **NOTICE**

*Serious engine damage can occur if the vehicle is driven while the engine is overheating.*

If the pointer moves onto the red line, the engine is overheating. Stop the vehicle as soon as safety permits and allow the engine to idle until the temperature reduces. If, after several minutes, the temperature does not reduce, switch off the engine and allow it to cool. If the problem persists, seek qualified assistance immediately.

**Note:** *If engine overheating occurs, there may be a noticeable reduction in engine power and the air conditioning may cease operation. This is a normal operating strategy, to reduce load on the engine and assist with engine cooling.*