

Dynamic launch	
DSC.....	105
Dynamic program.....	105
Dynamic stability control (DSC).....	89
configurable.....	106
DSC active warning lamp.....	47
DSC off warning lamp.....	47
dynamic launch.....	105
rain/ice/snow mode.....	104
spoiler.....	90
switching between DSC and tracDSC.....	90
switching off.....	89
switching on.....	90
E	
Easy route.....	143
Electric parking brake.....	95
Electric roof	
closing.....	78
manual re-set.....	78
opening.....	77
Electric seats.....	18
recalling a memory position.....	21
restricted seat travel.....	21
Electric windows	
operation.....	65
Electronic brake force distribution.....	95
Electronic data.....	214
Emergency (navigation).....	145
Emergency brake assist.....	95
Emergency call	
InControl link.....	133
Emergency key locking.....	16
Emergency release	
luggage compartment.....	75
Engine	
antifreeze level.....	167
breaking-in.....	156
compartment opening.....	158
coolant level.....	167
fuel types.....	151
oil level.....	165
specifications.....	216
starting	
keyless start backup.....	82
switching off.....	81
Engine/transmission warning lamp.....	47
Engine block heaters	
antifreeze.....	83
cold starting.....	83
connecting to mains supply.....	83
Engine compartment	
fluid filler locations.....	165
Engine compartment cleaning.....	162
Engine covers.....	159
Engine oil	
capacity.....	223
Engine starting.....	81
active exhaust.....	83
failure to start.....	82
Engine temperature warning lamp.....	45
Entering a destination.....	143
Entering the vehicle	
entry and exit mode.....	23
global opening.....	10
luggage compartment.....	10
passive entry.....	9
tailgate operation.....	10
unlocking mode.....	9
Ethanol.....	152
Event data recording.....	214
Exiting the vehicle	
arming the alarm.....	15–16
closing mislock.....	15
door locks and release levers.....	15
emergency locking.....	16
interior locks.....	15
perimeter alarm.....	16
Exterior cleaning.....	161
Exterior lamps	
bulb changing.....	159
Exterior mirrors	
electric.....	56
manual.....	56
mirror dip when reversing.....	56
External temperature	
warning lamp.....	47