



FLUID FILLER LOCATIONS

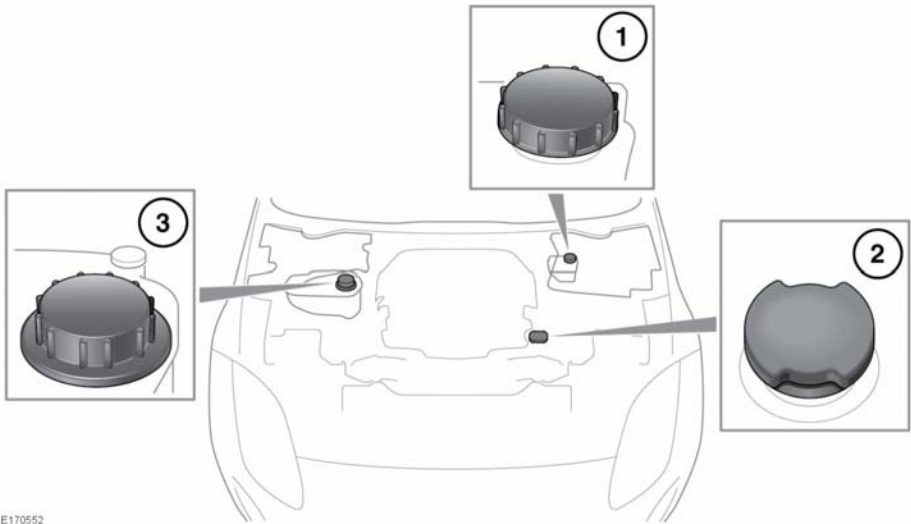

E170552

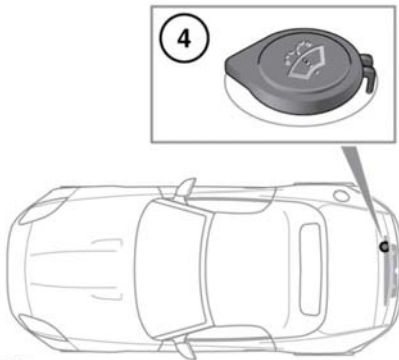

E170553

Note: The brake fluid reservoir is located underneath the left side hood access cover. See **159, UNDER HOOD COVERS - REMOVAL**.

1. Brake reservoir.
2. Engine oil.
3. Coolant reservoir (expansion tank).

4. Washer fluid reservoir.

⚠ WARNING

Do not drive the vehicle if there is a possibility that leaked fluid will come into contact with a hot surface, such as the exhaust.

⚠ WARNING

While working in the engine compartment, always observe the safety precautions. See **157, SAFETY IN THE GARAGE**.

CHECKING THE ENGINE OIL LEVEL

The engine oil level is not monitored when the engine is running and/or the vehicle is in motion.

NOTICE

Check the engine oil weekly. If any significant or sudden drop in oil level is noted, seek qualified assistance.