


Driving modes

DRIVING MODES OPERATION

Changing between the driving modes will alter various vehicle settings, for example, engine revs may alter on selection of a different driving mode, while at a constant accelerator pedal position, steering system feel may also become heavier or lighter. These changes are not dramatic but will be noticeable.

Vehicles with automatic transmission

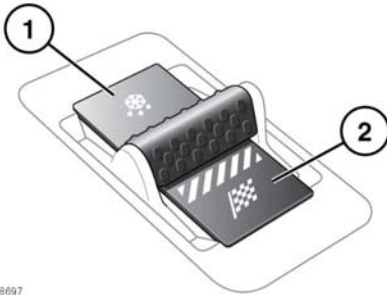

E148697

Note: Automatic transmission: The switch lever will always return to the center position when released, regardless of the mode selection.


The switch is located on the center console, next to the gear selector.

1. Move the switch lever to the Rain/Ice/Snow driving mode position to enable. Repeat this action to disable. See **104, RAIN/ICE/SNOW**.
2. Move the switch lever to the Dynamic driving mode position to enable. Repeat this action to disable. See **105, DYNAMIC**.

When the Rain/Ice/Snow driving mode or the Dynamic driving mode is enabled, the relevant LED indicator lamp, on the switch, will illuminate to confirm.

When the Rain/Ice/Snow driving mode or the Dynamic driving mode is disabled, the relevant LED indicator lamp, on the switch, will extinguish.

Vehicles with manual transmission

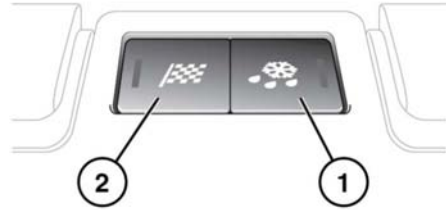

E167058

The buttons are located on the center console, below the gear selector.

1. Press the button to enable Rain/Ice/Snow driving mode. Repeat this action to disable. See **104, RAIN/ICE/SNOW**.
2. Press the button to enable Dynamic driving mode. Repeat this action to disable. See **105, DYNAMIC**.

When the Rain/Ice/Snow driving mode or the Dynamic driving mode is enabled, the relevant LED indicator lamp, on the button, will illuminate to confirm.

When the Rain/Ice/Snow driving mode or the Dynamic driving mode is disabled, the relevant LED indicator lamp, on the button, will extinguish.

RAIN/ICE/SNOW



Rain/Ice/Snow driving mode enhances stability of the vehicle to suit low grip conditions. This helps the vehicle to perform in a more gentle and controlled manner, to avoid skidding; allowing more confident progress under adverse conditions.

Note: Rain/Ice/Snow driving mode cannot be active at the same time as Dynamic mode.