


Wipers and washers

WIPER OPERATION

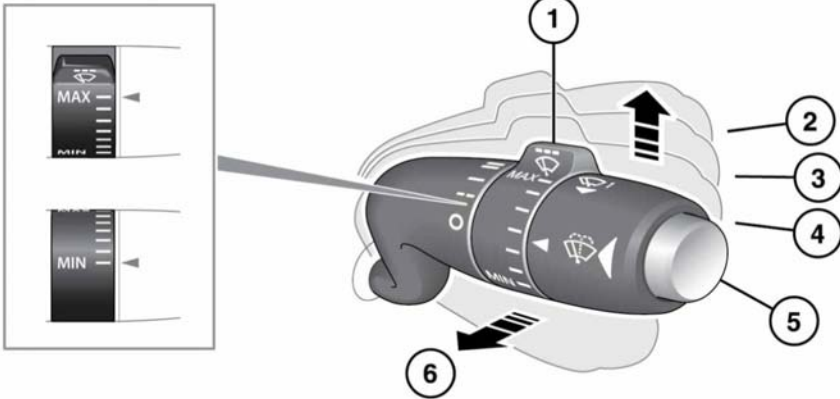

E132404

1. Rotate the control to adjust sensitivity.
MAX: Maximum sensitivity.
MIN: Minimum sensitivity.
2. Fast speed wipe.
3. Normal speed wipe.
4. Rain sensor activated wipe.
5. Windshield washer button.
6. Single wipe.

NOTICE

Do not operate the wipers on a dry windshield.

NOTICE

In freezing or very hot conditions, make sure that the wipers have not stuck to the windshield before operating.

NOTICE

Remove any snow, ice, or frost from the windshield, around the wiper arms and blades, and the screen scuttle, before operating the wipers.

Note: *If the wiper blades become stuck or jammed, an electronic cut-out may temporarily halt wiper operation. If this happens, switch off the wipers and the ignition. Clear any obstructions and free the wiper blades, before attempting to switch on the ignition.*

SPEED-DEPENDENT MODE

If the vehicle's speed drops below 1.2 mph (2 km/h) with the wipers operating, the wiper frequency automatically reduces. The wipers will switch to the next lowest speed. When the vehicle's speed increases to over 5 mph (8 km/h), the original wiper speed settings are restored.

RAIN SENSOR

NOTICE

Make sure that the wipers are switched off before entering a car wash. If the rain sensitive wipers operate during the car washing process, damage may occur to the wiper mechanism.