



E169246

If the seat is occupied by a lower weight adult and air bag deployment is judged by the system to be unnecessary, the passenger air bag will be deactivated and the **PASS. AIR BAG OFF** symbol on the overhead console will be illuminated. An occupant weighing approximately 100 lbs (45.4 kg) is classified as a lower weight occupant, although, at this weight, with occupant movements and vehicle motion, the air bag activation/deactivation should be expected to switch states occasionally. This is not necessarily indicative of a system fault.

AIR BAG SERVICE INFORMATION

⚠ WARNING

Do not attempt to service, repair, replace, modify or tamper with, any part of the Supplementary Restraint System (SRS). This includes wiring or components in the vicinity of SRS components. Doing so may cause the system to trigger or render the system inoperative, either of which may result in serious injury or death.

⚠ WARNING

Do not use any electrical test equipment or devices in the vicinity of SRS components or wiring. Doing so may cause the system to trigger or render the system inoperative, either of which may result in serious injury or death.

For your safety, all of the following operations should only be carried out by a Dealer/Authorized Repairer or suitably qualified person:

- Removal or repair of any wiring or component in the vicinity of any SRS components.
- Installation of electrical, or electronic, equipment and accessories.
- Modification to the front or sides of the vehicle exterior.
- Attachment of accessories to the front or sides of the vehicle.

Always contact your Dealer/Authorized Repairer if:

- An air bag inflates.
- The front or sides of the vehicle are damaged.
- Any part of the SRS shows signs of cracking or damage, including trim covering the air bags.