

## INCONTROL OVERVIEW

Jaguar InControl uses Smartphone and in-vehicle mobile technology, to remotely connect the vehicle to a number of services and convenience features.

InControl has 3 main features:

- InControl Remote.
- InControl Secure.
- InControl Apps.

For InControl Remote and InControl Secure, an InControl account must be created. If your Dealer has not pre-registered your account, or if you are not the first owner of the vehicle, then you will need to visit the **InControl** section of [www.jaguarusa.com](http://www.jaguarusa.com) to create an InControl account. Once the InControl account has been created, follow the on-screen instructions to connect the InControl account to the vehicle and to activate the services on the vehicle.

**Note:** 100% mobile connectivity cannot be guaranteed in all locations.

**Note:** It is the owner's responsibility to remove the vehicle from their InControl account, when ownership of the vehicle is transferred.

## INCONTROL REMOTE

InControl Remote comprises the following:

- The InControl Remote Smartphone App.
- A Jaguar Assistance Breakdown Call feature.
- A Jaguar SOS Emergency Call feature.

### InControl Remote Smartphone App

The InControl Remote Smartphone App has a number of different features, that are displayed on the different screens listed:

- The vehicle' status screen will display the vehicle's current fuel level, fuel range, and odometer reading, and a vehicle locator display, to help find the last parked location of the vehicle. The current security status of the vehicle will also be shown. Any current vehicle warnings will also be displayed. Touch the warning on the screen for further information.
- The **Vehicle Security** screen will display the open/closed status of all the doors/windows, and allow the vehicle to be locked/unlocked. This screen will also display the vehicle's alarm status, e.g., **set** or **not set**.  
**Note:** Regardless of which screen is currently displayed, if the vehicle's alarm is sounding, then a pop-up screen will appear with an option to reset the alarm. The alarm may also be reset via the **Vehicle Security** screen.  
**Note:** It remains the responsibility of the driver to know the location of the vehicle and to make sure that the vehicle is secured.
- The **Journeys** screen will display the most recent trips completed in the vehicle.  
**Note:** This feature can be enabled/disabled via the **Settings** screen.  
**Note:** The stored trips can be viewed, deleted, or downloaded as a .csv file to assist with business expenses.
- The **Assistance** screen will display the Vehicle Identification Number (VIN) and registration number. This screen will also allow for direct calls to be made to Jaguar Assistance (in the event of a breakdown) and the Tracking Call Center (in the event of a vehicle theft).

- The **Settings** screen will allow the vehicle's security status and the trip recording feature to be switched on/off. It also allows access to your InControl account.
- The vehicle's status screen will also display the **Beep & Flash** feature. Touch this icon to help locate the vehicle by operating the vehicle's exterior lamps; a short audible horn alert will also sound.

**Note:** *It is the responsibility of the driver to comply with all regulations in force regarding the use of vehicle horns.*

- The **Remote Climate** screen allows the engine to be started remotely (for vehicles with an automatic transmission), and to run for up to 30 minutes to provide a comfortable temperature inside the cabin in advance of the driver entering the vehicle. Remote climate will not function if any of the following conditions exist:
  - The vehicle's fuel level is low.
  - The vehicle's battery charge level is low.
  - The vehicle is not locked.
  - A window, door, hood, or the Luggage compartment is open.
  - The engine has been manually started.
  - A system error with any required vehicle system has been detected.
  - A theft has been detected.
  - The vehicle's alarm is sounding.
  - A crash event has been detected.
  - The hazard warning lamps are switched on.
  - The automatic transmission is not in Park (P).
  - The brake pedal is pressed.

## **WARNING**

**Do not operate the Remote climate feature while the vehicle is in an enclosed space. Doing so can cause a build up of highly toxic fumes which may cause unconsciousness or death.**

## **WARNING**

**Do not operate the Remote climate feature when refueling the vehicle. Doing so may cause fuel vapors to combust, causing a fire/explosion.**

**Note:** *Some markets may prohibit the use of a remote engine start. It remains the responsibility of the driver to know if this function can legally be used.*

- **Wake Up Timer:** The InControl Remote system on the vehicle, will shut down if the vehicle is not driven for 4 days. This is to conserve battery power. If, for example, you are on vacation or away on a business trip, then you can use the **Wake Up Timer** on the Smartphone App. This feature will wake up the InControl Remote system on the selected date. Any date within a 30 day period can be chosen.

**Note:** *The **Wake Up Timer** cannot be set once the InControl Remote system has shut down. Once the **Wake Up Timer** is set, the InControl Remote system will shut down on the second day after the car was last driven, to preserve battery power for wake up.*

The InControl Remote Smartphone App can be downloaded for Apple's iPhone from the Apple App Store, or for Android phones, from Google Play.

**Note:** *The availability and functionality of the InControl Remote Smartphone App features will depend on the specification of the vehicle and the market.*