

# Warning lamps

Stop the vehicle as soon as safety permits and check and top up the brake fluid, or allow the brakes to cool, if necessary. If the lamp remains illuminated, seek qualified assistance before continuing.

## BRAKE (YELLOW)



USA.



Canada.

Illuminates with a message, to indicate worn brake components.

The messages that may appear in the Message center are:

- All vehicles: **Brake Pads Worn.**
- Vehicles with carbon ceramic brakes: **Carbon Ceramic Brake Discs Worn.**

When a message is displayed, drive carefully and seek qualified assistance at the earliest opportunity.

*Note: If the lamp illuminates without a message, then a fault has been detected with the brake wear system. Drive carefully and seek qualified assistance at the earliest opportunity.*

## PARKING BRAKE (RED)



USA.



Canada.

Illuminates when the Parking brake is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.

## SEAT BELT (RED)



Illuminates, accompanied by a chime, when the vehicle is in motion and an occupied front seat belt is unbuckled. The lamp will extinguish when the relevant seat belt(s) is buckled.

*Note: Objects on the front passenger seat may activate the Seat belt reminder. It is recommended that any objects placed on the front passenger seat are secured using the seat belt. See 24, USING THE SEAT BELTS.*

## ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)

### ⚠ WARNING

**If the ABS and brake warning lamps are illuminated at the same time, do not drive the vehicle until the fault is rectified as the brake system may not be functioning correctly. This may, in turn, lead to loss of control causing an accident. Seek qualified assistance immediately.**



Illuminates briefly, as a bulb check, when the ignition is switched on.

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.