

WARNING LAMPS AND INDICATORS

RED warning lamps are for primary warnings. A primary warning must be investigated immediately by the driver or qualified assistance before continuing.

AMBER and YELLOW warning lamps are for secondary warnings. Some indicate that a vehicle's system is in operation; others indicate that the driver must take action and then seek qualified assistance as soon as possible.

GREEN and BLUE lamps within the Instrument panel indicate system status.

LAMP CHECK

A warning lamp bulb check is initiated when the ignition system is switched on, the lamps will then go out after a short period. If any warning lamp remains on after the engine is started, investigate the cause before driving.

Some warning lamps have associated messages displayed in the Message center.

Note: *Not all warning lamps are included in the check (e.g., high beam headlamps and direction indicators).*

CRITICAL WARNING MESSAGE (RED)



Illuminates when a critical warning message is available in the Message center.

GENERAL WARNING/INFORMATION MESSAGE (AMBER)



Illuminates when a non-critical warning message or an information message is available in the Message center.

ENGINE TEMPERATURE (RED)



Illuminates when the engine temperature is too high, accompanied by a message in the Message center.

Stop the vehicle as soon as safety permits and seek qualified assistance before continuing.

BRAKE (RED)

⚠ WARNING

Do not drive if the message Brake Fluid Low is displayed. Check the brake fluid level and top up as necessary. If necessary, seek qualified assistance before continuing. Driving with low brake fluid can cause increased braking distance or brake failure and can result in a collision.

⚠ WARNING

Do not drive if the message Brakes Overheating is displayed. Stop the vehicle as soon as safety permits and allow the brakes to cool. If necessary, seek qualified assistance before continuing. Driving with overheated brakes can cause increased braking distance or brake failure and can result in a collision.

Note: *The Brakes Overheating message is only available on vehicles with carbon ceramic brakes.*



USA.



Canada.

Illuminates briefly, as a bulb check, when the ignition is switched on. If the lamp illuminates while driving, suspect low brake fluid level, overheated brakes, or a fault with the Electronic Brake Distribution (EBD) system.