


CLIMATE CONTROL

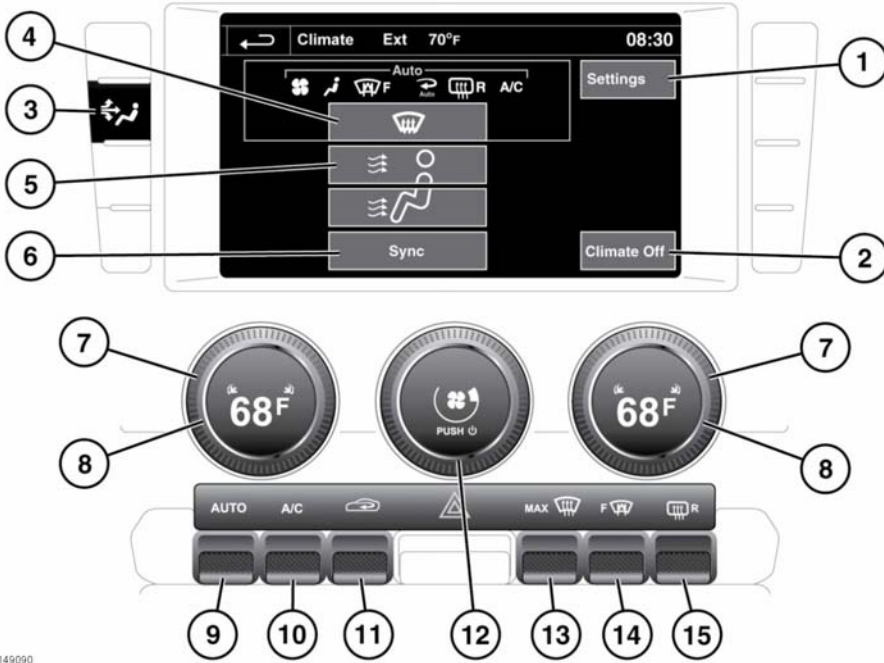

E149090

1. Climate control **Settings** menu.
2. Climate control system **On/Off**.
3. Shortcut to the **Climate** menu:
To access the **Climate** menu from the Touch screen **Home** menu, setup **Climate** as a shortcut. See 66, **TOUCH SCREEN HOME MENU**.
4. Distributes air to the windshield.
5. Air distribution:
Deployable center vents will open automatically when the **face** or **face/foot** modes are selected. The vents will close automatically when the **maximum defrost**, **defrost/foot** or **foot only** modes are selected.

The deployable center vents can be set to always open via the **Climate** control **Settings** menu.

Note: More than one setting may be selected at a time, to achieve the desired distribution.

Note: The deployable center vents will always close when the Climate control system is switched off or when the ignition is switched off.

6. Synchronize the driver and passenger climate zone settings.
7. Temperature controls: For individual driver/passenger settings. Rotate to alter the temperature.