

# Garage door opener

## RADIO FREQUENCY TRANSCEIVER

In some countries, the Radio Frequency (RF) transceiver is also known as the HomeLink® Universal Transceiver.

The RF transceiver is located in the rear view mirror. It can be programmed to transmit the signals of up to 3 different hand held transmitters. These can be used to operate garage doors, entry gates, home lighting, security systems, or other RF operated remote devices.

### **⚠ WARNING**

**Do not use the RF transceiver with any garage door opener that lacks the safety stop and reverse feature, as required by safety standards.**

### **⚠ WARNING**

**When programming the RF transceiver to a garage door opener or entry gate, make sure that the area is clear of people and objects. This will prevent potential harm or damage, as the gate or garage door will activate during programming.**

### **NOTICE**

*This device may suffer from interference, if operated in the vicinity of a mobile or fixed station transmitter. This interference is likely to affect the hand-held transmitter, as well as the RF transceiver.*

For further information, see **64, INFORMATION AND ASSISTANCE**.

The transceiver RF approval numbers for the USA and Canada are shown below:

USA and Puerto Rico FCC ID: NZLJLRHL4

Canada IC: 4112A-JLRHL4.


## BEFORE PROGRAMING

### **NOTICE**

*When programming a remote device that may require you to press and re-press the hand-held transmitter, unplug the device during the programming process, to prevent possible motor failure.*

For best results, fit a new battery to the hand-held transmitter before programming. If the remote device's receiver is equipped with an antenna, make sure the antenna is extended.

## PROGRAMING

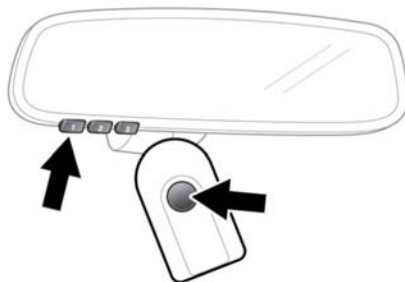

E169455

To program the RF transceiver:

1. Switch the vehicle's ignition on.
2. Position the hand-held transmitter 1 to 3 inches (25 to 75 mm) from the rear view mirror.
3. Simultaneously press and hold the memory button on the hand-held transmitter, and the desired memory button on the RF transceiver. An indicator LED, located on the left side of the mirror, will start flashing slowly.
4. When the LED starts flashing quickly, release both buttons.