

Parking aids

The range of the Parking aid sensors varies between the front, the rear, and the corners of the vehicle.

When activated, the front sensors will remain active as long as the vehicle's forward speed does not exceed 10 mph (16 km/h).

Selecting Neutral (**N**) from **R** will keep the front and rear sensors active.

When the Parking aid system is active, a pop-up appears on the Touch screen showing a plan view of the vehicle and the immediate surrounding area. Touch **Display Off** to cancel the view.

Note: *If a Rear camera is fitted, when **R** is selected, the camera display is selected automatically.*

When objects are detected, the Parking aid emits a warning tone which increases in frequency as the vehicle gets closer to the object and then becomes constant when the obstacle is within 12 ins (300 mm).

Note: *The front Parking aid provides an audible proximity warning when driving forwards and when reversing.*

CLEANING THE SENSORS

NOTICE

When washing the vehicle, do not aim high pressure water jets directly at the sensors. Do not use abrasive materials or hard/sharp objects to clean the sensors. Only use approved vehicle shampoo.

The sensors should be kept clean to maintain accuracy and performance.

PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, and the switch indicator will flash. Contact your Dealer/Authorized Repairer as soon as possible.

PARKING AID VOLUME

To set the volume of the Parking aid warning tones:

- Select **Setup** from the Touch screen **Home menu**, then select **System**.
- Select **Volume presets**, then use the **+** or **-** soft keys alongside **Parking aid** to adjust the volume for both the front and rear warning tones, or rotate the volume control when the warning tones are sounding.



REAR CAMERA

⚠ WARNING

Always turn and look before reversing. It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.

When Reverse (**R**) is selected, the screen automatically displays a wide-angle, color image from the rear of your vehicle.

The Rear camera system provides a rear-view image to assist in reversing the vehicle. Overlaid on the image are reversing guidance lines.

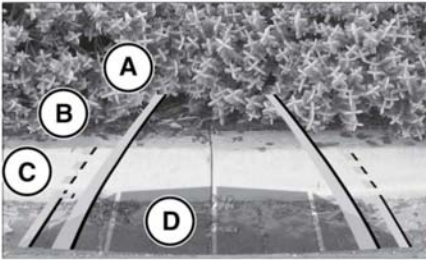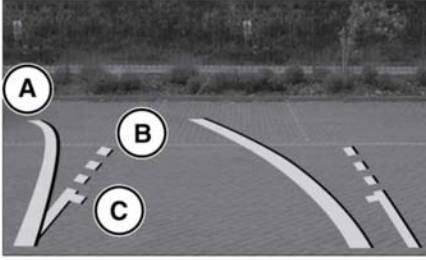

E142176

- A.** Solid line: The projected wheel trajectory.
- B.** Dotted line: The safe working width of the vehicle (including the exterior mirrors).
- C.** Luggage compartment access guidance lines: Do not reverse past this point if luggage compartment access is required.
- D.** Parking aid sensor activation: a colored area appears to indicate which rear sensor(s) is active.

Note: The camera display has priority over the Parking aid display.

NOTICE

Some overhanging objects or barriers, which could cause damage to the vehicle, may not be detected by the camera.

To cancel the Rear camera display at any time, push the Touch screen hard button (see **66**, **TOUCH SCREEN HOME MENU**) or touch the back soft key.

To adjust the camera settings while in **R**, touch anywhere on the Touch screen to display the user options.

Touch the icon for the feature required and then the back icon:



Touch to enable/disable the Park assist guidance lines.



Touch to enable/disable the sensor/active graphics.