


## ADJUSTING THE STEERING WHEEL

### **⚠ WARNING**

Never adjust the steering wheel while the vehicle is in motion. Doing so may cause a loss of control, potentially resulting in an accident.

### **⚠ CAUTION**

Do not use steering wheel mounted security devices. Movement of the steering wheel, in exit or entry mode, could result in damage to the vehicle or possible injury to the occupant.

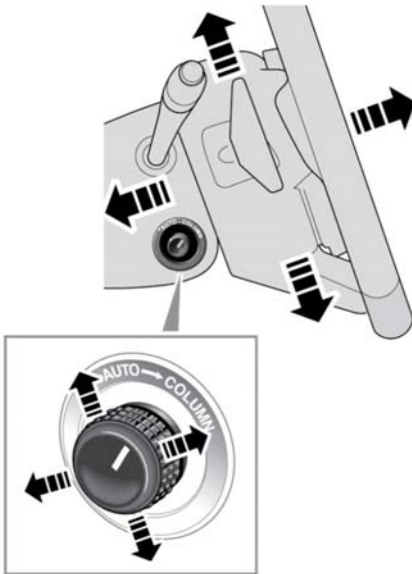

The steering wheel can be adjusted for tilt and reach as follows:

- Move the control forwards or rearwards to adjust reach.
- Move the switch up or down to adjust tilt.

Up to 3 steering wheel positions can be stored and recalled, along with seat and exterior mirror positions, by the driving position memory. See 20, **DRIVING POSITION MEMORY**.

## ENTRY AND EXIT MODE

With the steering column control in the **AUTO** position, the steering column will move to provide easier entry and exit from the vehicle.

On opening the driver's door, the system will raise the steering column to the highest position, assisting with exit from the vehicle. When the driver's door is closed and the ignition turned on, the system will return the steering column to the previous position.

**Note:** If the steering column is adjusted during entry or exit operation, automatic movement will stop.

To prevent automatic movement of the steering column, turn the control clockwise to the manual position (**COLUMN**).

**Note:** If the steering column switch is moved away from **AUTO** when the steering column is in the exit position, the steering column will move back to its previous position when the driver's door is closed and the ignition is switched on.

## HEATED STEERING WHEEL



To activate the heated steering wheel, press the switch. Press again to turn off.