


- While standing in front of the vehicle, apply a continuous, even pressure to both sides of the hood in the positions shown, until the hood is securely latched on both sides.
- Check that both latches are fully engaged by attempting to lift both sides of the rear outer-edge of the hood. This should be free from all movement.
- If the hood fails to latch securely on either side, re-open the hood and repeat the above procedure until both sides of the hood are securely latched.

## UNDER HOOD COVERS - REMOVAL

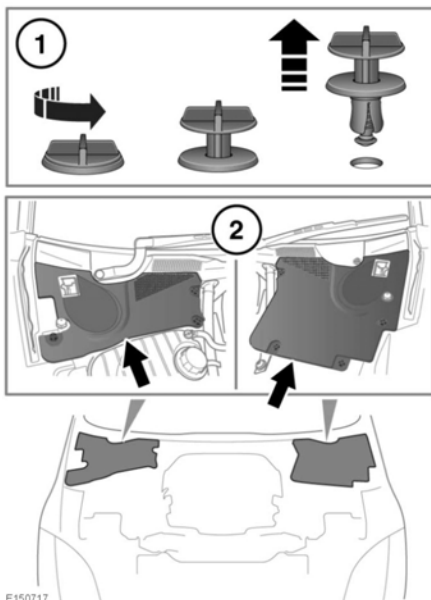

1. Rotate the turnbuckle screws counter-clockwise, then pull to remove the turnbuckles securing the cover.
2. Lift the front edge of the cover and slide forwards to remove.

## UNDER HOOD COVERS - REFITTING

### NOTICE

*Before refitting the under hood covers, make sure that no pipes, cables, or other items, have been trapped between the cover and casing.*

1. Place the cover over the casing and make sure the holes are aligned.
2. Press the cover down firmly and push the turnbuckles through the cover and casing. Rotate the turnbuckle screws clockwise to tighten.

## UNBLOCKING WASHER JETS

### CAUTION

**Do not operate the washer jets during adjustment. Windshield washer fluid may cause irritation to the eyes and skin. Always read and observe the washer fluid manufacturer's instructions.**

If a washer jet becomes blocked, use a thin strand of wire to unblock the jet by inserting the wire into the jet. Make sure that the wire is completely removed after unblocking.

## CHANGING A BULB

### NOTICE

*All lamps are either LED or Xenon units and must only be replaced by a Dealer/Authorized Repairer.*

E150717