


ENGINE COMPARTMENT FUSE BOX

Left side fuse box

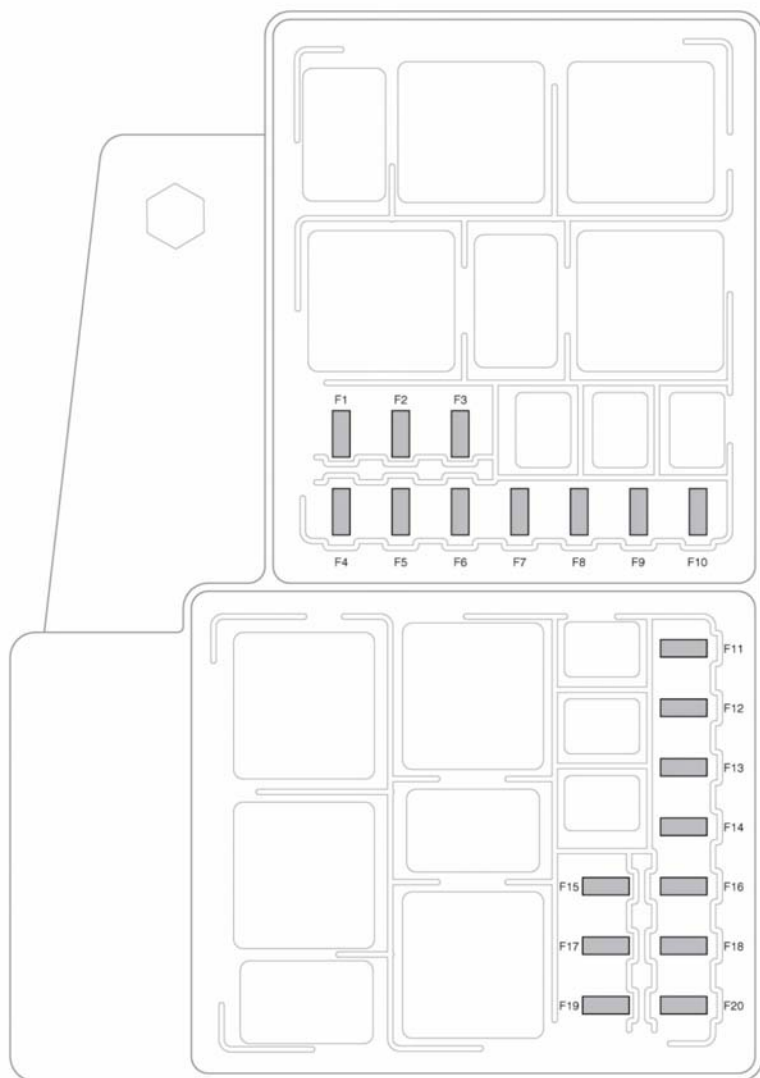


E159396

Fuse No	Rating (amps)	Fuse Color	Circuit
F1	5A	Tan	Diagnostic socket
F2	20A	Yellow	Washer transfer pump
F3	-	-	-
F4	5A	Tan	Monitor
F5	25A	Clear	Engine management (ignition coils)
F6	5A	Tan	Engine management (MAF sensors)
F7	5A	Tan	Engine management (sensors)
F8	10A	Red	Engine management (actuators)
F9	10A	Red	Engine management (throttle motor)
F10	15A	Blue	Engine management (variable valve timing)
F11	20A	Yellow	Engine management (oxygen sensor-left side)
F12	20A	Yellow	Engine management (oxygen sensor-right side)
F13	20A	Yellow	Engine management (catalyst oxygen sensor)
F14	10A	Red	Electric water pump
F15	5A	Tan	Active exhaust valve
F16	-	-	-
F17	5A	Tan	Engine management system
F18	30A	Green	Anti-lock Braking System (ABS) valves
F19	15A	Blue	Electronic transmission switch, Transmission control module
F20	30A	Green	All Wheel Drive system

Fuses

Right side fuse box

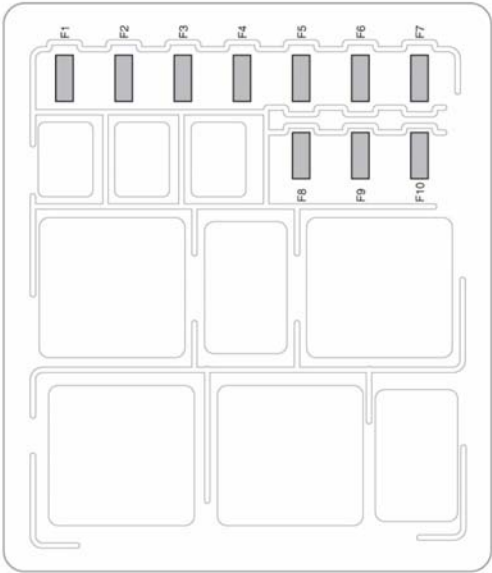

E159395

Fuse No	Rating (amps)	Fuse Color	Circuit
F1	25A	Clear	Headlamp wash
F2	-	-	-
F3	15A	Blue	Horns
F4	-	-	-
F5	-	-	-
F6	-	-	-
F7	-	-	-
F8	-	-	-
F9	-	-	-
F10	-	-	-