



ACTIVE EXHAUST

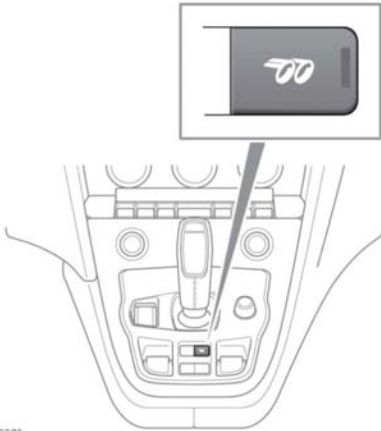

E149323

Vehicles with automatic transmission

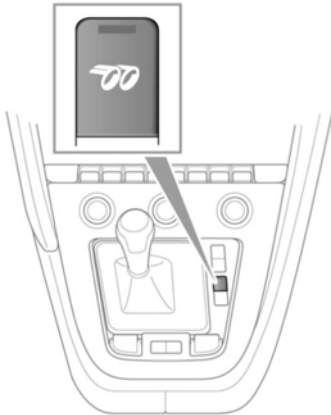

E167054

Vehicles with manual transmission

For vehicles with an Active exhaust, this system will operate valves in the exhaust to produce a richer and louder noise to enhance the driving experience.

Note: Active exhaust is automatically selected when the vehicle is in Dynamic mode.

Press the switch to engage the Active exhaust. The switch lamp will illuminate to confirm activation.

Press the switch again to disengage the Active exhaust system. The switch lamp will extinguish to confirm deactivation.

Note: Active exhaust will be disengaged at the start of each ignition cycle.

ENGINE BLOCK HEATERS

NOTICE

The fitting of an engine block heater does not eliminate the need for antifreeze.

Engines are more difficult to start when the ambient temperature is very low. In geographical areas where temperatures below 14°F (-10°C) are experienced frequently, it is advisable to fit an engine block heater. The block heater will have an insulated connector at the front of the vehicle, which is connected to a mains supply using a suitable extension cable. The heater can remain in use overnight, if required. Typically, an engine block heater will use between 0.4 and 1 kWh.

For further information, consult a Dealer/Authorized Repairer.