

Note: *The engine will restart automatically if the switch is pressed while an automatic engine stop is in progress.*

To confirm that the system is off, the message **AUTO STOP-START OFF** is momentarily displayed. If the Intelligent stop/start switch is pressed while there is a fault, the message **AUTO STOP-START UNAVAILABLE** is displayed.

DRIVER EXIT

Note: *The Driver exit feature is only available when Intelligent stop/start is enabled.*

To prevent the vehicle from being inadvertently left in a driveable condition, the vehicle will detect when a driver is not present, and automatically switch off the ignition.

If Drive (**D**) or Sport (**S**) is selected, the Driver exit feature will switch the vehicle's ignition off if the following conditions exist:

- The driver's seat belt is unbuckled, and
- The brake pedal is released.

If Neutral (**N**) or Park (**P**) is selected, the Driver exit feature will switch the vehicle's ignition off if the driver's seat belt is unbuckled.

Once the vehicle's ignition has been switched off, the vehicle can be locked. For more information, see **15, LOCKING AND ARMING THE ALARM**.