

# Exterior lights

To manually override to low beam from High beam assist, pull the lighting control to the flash position and High beam assist will be canceled. To return to High beam assist, push the lighting control to the high beam position and then return it to the central position.



When High beam assist is enabled, the system indicator will illuminate.

**Note:** Make sure the sensor in the rear-view mirror is not blocked or obstructed. The following may also affect the operation of High beam assist:

- Highly reflective road signs.
- Vehicles with dim headlamps.
- Adverse weather conditions.
- A dirty sensor.
- A dirty, damaged, or fogged windshield.

To turn off High beam assist, turn the rotary control from **AUTO** to headlamps on.

The High beam assist feature can be disabled/enabled via the **Vehicle Settings** menu. See **42, INSTRUMENT PANEL MENU**.

## HEADLAMPS - CONDENSATION

In certain circumstances, fogging may occur on the inside of a lamp lens. This is caused by natural changes in environmental conditions. This fogging is not detrimental to lamp performance and will clear during normal usage.