
TIRE REPAIR KIT

If you are in any doubt regarding your ability to carry out the instructions, contact a Dealer/Authorized Repairer before attempting the repair.

Your vehicle may not be equipped with a spare tire. Alternatively, your vehicle will be fitted with a tire repair kit which can be used to repair **one** tire. It is essential that you read the following guide before attempting to repair a tire.

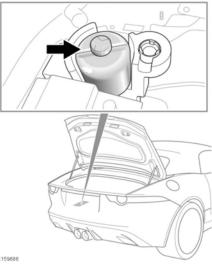

The tire repair kit consists of a canister of sealant located below the Luggage compartment left-side (battery) cover, in front of the vehicle's battery, as shown, and a compressor located in the Luggage compartment.

Note: Vehicles with carbon ceramic brake rotors are supplied with two wheel guide pins. The pins are stored with the compressor.

The tire repair kit seals most punctures with a maximum diameter of 1/4 inch (6 mm).

The tire repair kit is located under the floor panel in the Luggage compartment. If required, also remove the Luggage compartment left-side (battery) cover.

Note: The sealant used in the tire repair kit has a shelf life and the expiry date is shown on the tire sealant bottle. Make sure the container is replaced before the expiry date.