

Instrument panel

Trips may be added together in Auto, to record a continuous trip. Press the **TRIP** button for longer than 1 second, when Auto trip memory values for distance, average speed, and average fuel economy are displayed, then **Adding Last Journey** or **Removing Last Journey** will appear on the screen. Select the required option. Press the **TRIP** button for longer than 1 second, and the previous trip information will be added to, or removed from, the current trip, and the new total will be displayed. There is no limit to the number of times this can be done before the ignition is switched off.

TRIP DISTANCE

This shows the distance traveled since the last memory reset. The maximum trip reading is 9999.9 (miles or kilometers). The computer will automatically reset to zero if this distance is exceeded.

RANGE

This shows the predicted distance (miles or kilometers) that the vehicle should travel on the remaining fuel, assuming fuel consumption stays constant.

IMPERIAL/METRIC/MIXED DISPLAY

The Trip computer readings can be changed between metric, imperial, and mixed units in the **Trip Computer** menu of the Message center. See **42, INSTRUMENT PANEL MENU**.

***Note:** The temperature display can be changed between °F (Fahrenheit) and °C (Celsius) independently of imperial or metric units.*

SERVICE INTERVAL INDICATOR

An upcoming service interval will be notified to the driver via the Message center, as a distance left until the service is due.