Select **Clear all** to deselect all the previously highlighted (currently displayed) shortcuts and disable them from appearing on the **Shortcuts Menu** screen. Alternatively, touch each highlighted item to deselect individual features from the displayed list.

Select **Default** to enable the vehicle's predetermined shortcuts to be displayed.

Language: Select the required language. Select Male or Female voice. Touch Change to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

Note: Some languages are not yet available for system display text.

Volume presets: Adjust the volume for the available system's announcements (e.g., announcements, Parking aid, Phone, Navigation, etc.).

SELECTING VALET MODE

Valet mode allows the vehicle to be unlocked by a parking attendant, without giving access to the Luggage compartment and glove box. Valet mode also prevents operation of the Touch screen, to prevent access to telephone numbers or navigation addresses.

- 1. From the Home menu, select Valet.
- Enter a 4 digit Personal Identification Number (PIN) (personally chosen). On completion, touch the **0k** soft key. Enter the PIN again to confirm.
- If you wish to cancel the PIN, select Delete. If the PIN is canceled, or incorrectly entered, you will be prompted to enter the PIN again.
- 4. Valet mode activated is displayed to indicate that the PIN has been accepted.

The Luggage compartment and glove box are now securely locked in Valet mode and the **Valet mode On** screen is displayed.

DESELECTING VALET MODE

- 1. When you re-enter the vehicle, select Valet.
- Enter your 4 digit PIN and touch the Ok button.

Valet mode deactivated is displayed to indicate that your PIN has been accepted.

- The Luggage compartment will return to the previously set security requirement.
- · The Touch screen will be enabled.

Note: If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorized Repairer.

EXTRA FEATURES

From the **Home menu** screen, navigate to the right to display the **Extra features** menu screen(s). This menu allows selected extra features to be displayed for adjustment or switched on/off. For example:

- Climate: Enable/disable and adjust the climate settings.
- **Stealth**: Enable/disable automatic operation of the interior lamps.

If there are more extra features available than can be displayed at any one time, they will be displayed in alphabetical order. Use the forward or back soft keys to move to the next screen.

Note: The amount of available extra features is dependent on the vehicle's specification.