

**Note:** Refit these parts in the reverse order of removal.

## CHANGING A FUSE

### **NOTICE**

*Always turn off the ignition system and the affected electrical circuit, before replacing a fuse.*

### **NOTICE**

*Fit Jaguar approved replacement fuses of the same rating and type, or fuses of a matching specification.*

### **NOTICE**

*If the replacement fuse blows after installation, the system should be checked by a Dealer/Authorized Repairer.*

**Note:** *Jaguar recommends that owners do not remove or replace relays. It is recommended that you seek qualified assistance in the event of a relay failure.*

Spare fuses and the fuse removal tool are located in the passenger side footwell fuse box. See **181, PASSENGER COMPARTMENT FUSE BOX**.