

Note: Refit these parts in the reverse order of removal.

CHANGING A FUSE

NOTICE

Always turn off the ignition system and the affected electrical circuit, before replacing a fuse.

NOTICE

Fit Jaguar approved replacement fuses of the same rating and type, or fuses of a matching specification.

NOTICE

If the replacement fuse blows after installation, the system should be checked by a Dealer/Authorized Repairer.

Note: *Jaguar recommends that owners do not remove or replace relays. It is recommended that you seek qualified assistance in the event of a relay failure.*

Spare fuses and the fuse removal tool are located in the passenger side footwell fuse box. See **181, PASSENGER COMPARTMENT FUSE BOX**.