

**Note:** Rain/Ice/Snow driving mode will remain selected indefinitely, even after the ignition is switched off. Rain/Ice/Snow driving mode must be deselected, if no longer required.

## DYNAMIC



Dynamic driving mode coordinates the vehicle's control systems to deliver a high performance driving experience.

**Note:** Dynamic driving mode cannot be active at the same time as Rain/Ice/Snow mode.

**Note:** Dynamic driving mode will remain selected for approximately 6 hours after the ignition is switched off, after which point it will need to be selected again, if required.

**Note:** When the transmission is set to permanent manual mode and Dynamic driving mode is selected, transmission up-shifts are fully controlled by the driver. The transmission will not change up automatically, even when the rev limit is reached (the gear position indicator in the Message center will glow amber, to indicate that the next gear should be selected).

## DYNAMIC LAUNCH

Dynamic launch enhances vehicle acceleration and automatic gear changes during launch.

To activate:

1. Make sure that:
  - The vehicle is stationary.
  - The engine is running.
  - The steering is in the straight ahead position.
  - Dynamic driving mode is engaged. See **104, DRIVING MODES OPERATION.**
2. Press the brake pedal and hold with the left foot.

3. Move the gear selector to either the Drive (D) or Sport (S) position. See **86, AUTOMATIC TRANSMISSION).**
4. Using the right foot, lightly press the accelerator pedal until the Message center displays **DYNAMIC LAUNCH READY.**
5. Release the brake pedal, then quickly press the accelerator pedal to the kickdown position. The Message center will display **DYNAMIC LAUNCH ACTIVE.**

**Note:** Any manual gear selection, from the gear selector or steering wheel gearshift paddles, will override the Dynamic launch operation.

Dynamic launch will remain available for further use after a short period of time.

**Note:** Dynamic launch will not be active when the accelerator pedal is released from a high demand position.

Prolonged application of the brake pedal will deactivate Dynamic launch.

**Note:** Dynamic launch is not fitted to all vehicle derivatives.