

Warning lamps

TIRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message center, to warn that one or more tires are significantly under-inflated. Stop the vehicle as soon as possible, check the tire pressures, and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

HIGH BEAM ASSIST (GREEN)



Illuminates when the High beam assist feature has switched on the high beams.

INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent stop/start system.

Note: Other warning lamps, normally shown during the lamp check, do not illuminate during an engine shutdown by the Intelligent stop/start system.

TURN SIGNALS (GREEN)



The appropriate warning lamp will flash when the turn signal control is moved up or down to signal a turn. If a turn signal lamp bulb fails, the audible ticking and warning lamp will sound and flash at twice the normal rate, when that turn signal lamp is selected.

CRUISE CONTROL (GREEN)



Illuminates when Cruise control is active.