
Driving modes

CONFIGURABLE DYNAMIC MODE

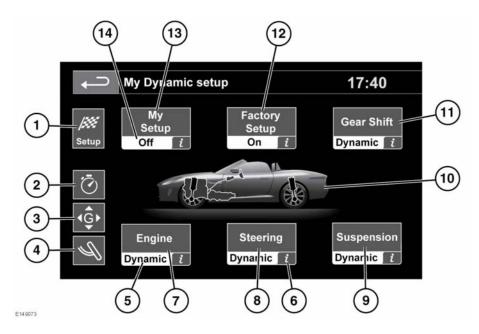

Vehicles with configurable dynamics, allow the Dynamic mode settings to be configured via the Touch screen for selected characteristics, with a choice between Normal and Dynamic settings. See **69**, **EXTRA FEATURES**.

- 1. Touch to display and adjust configurable settings, when in Dynamic mode.
- **2. Stopwatch**: Touch to display live timings and split timings.

Note: Up to 99 split times can be saved and reviewed.

Note: When the **Press to split** soft key has been selected, it is disabled for 3 seconds while the split time is displayed.

- **3. G Meter**: Touch to display the current amount and direction of G Force.
- **4. Pedal Graph**: Touch to display a brake and accelerator graph, or a live display.

- **5.** Indicates status: Dynamic or Normal.
- **6.** Touch to display a description of the function.
- Engine: Touch to select the Dynamic or Normal setting.
- 8. Steering: Touch to select the Dynamic or Normal setting.
- **9. Suspension**: Touch to select the **Dynamic** or **Normal** setting.
- **10.** Displays which dynamic functions are selected.
- Gear Shift: Touch to select the Dynamic or Normal setting.
- 12. Factory Setup: Touch to switch on/off.
- **13. My Setup**: Touch to switch the user settings **on/off**.
- 14. Indicates status, on/off.