

Audio/video overview

7. Seek up:
 - Short press to select the next radio preset or the next track on the chosen audio source.
 - Long press to seek to the next radio station.
8. Seek down:
 - Short press to skip/move to the previous radio preset or the previous track on the chosen audio source.
 - Long press to activate manual-seek; scan backwards through a track.

AUDIO SETTINGS


To view the audio Settings menu, touch the **Settings** soft key on the **Audio/Video** menu screen. See **66, TOUCH SCREEN HOME MENU**.

To adjust the sound settings:

1. Touch the **+** or **-** soft keys to adjust the Bass, Treble, or Subwoofer levels.
2. If surround sound is fitted, touch **DPLIIx**, **DTS Neo:6**, **Meridian Trifield**, or select **Off** to switch the surround sound off.

Note: Surround sound options are not available for certain sources where the surround sound mode is set automatically.

To adjust balance and fade:

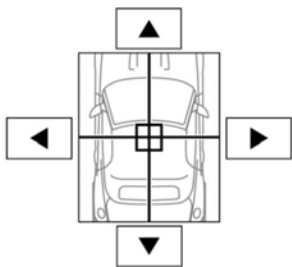

1. From the **Sound** settings menu, select **Balance/Fade**.
2. Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and 'drag' it to the required position.

LOADING DISCS

NOTICE

Do not force the disc into the slot.

NOTICE

Do not use irregular shaped CDs or DVDs and those with a scratch protection film or self-adhesive label attached.

NOTICE

The CD unit will play compact discs that conform to the international Red Book standard audio specification. Playback of CDs not conforming to this standard cannot be guaranteed.

NOTICE

Recordable (CD-R) discs and re-writable (CD-RW) discs may not function correctly.

NOTICE

Recordable (DVD-R or DVD+R) discs may not function correctly.

NOTICE

Dual format, dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and; consequently, playback cannot be guaranteed, and jamming may occur.

E151486