

Press to switch the rear fog lamps on/off. They will only operate while the side lamps, headlamps, or Auto lamps are selected. The warning lamp will illuminate. See **47, REAR FOG LAMP (AMBER)**.

DAYTIME RUNNING LAMPS

In some countries, with the rotary control in the **OFF** or **AUTO** position, low beam headlamps, side lamps, tail, license plate lamps, and side marker lamps will switch on automatically with the following conditions:

- The ignition is on.
- The Parking brake is not applied (is released) - market dependent.

APPROACH LAMPS

The headlamps can be illuminated remotely for a programmed length of time, by pressing the headlamp button on the Smart key. See **7, UNLOCKING THE VEHICLE**. Press the button again to switch off.

***Note:** In some markets, a second press will illuminate the reverse lamps, and a third press is required to turn the lamps off.*

ADAPTIVE FRONT LIGHTING SYSTEM (AFS)

The Adaptive Front lighting System is designed to give the driver improved visibility, using a swiveling headlamp unit and a cornering lamp. These lamps broaden the beam of the headlamps when cornering in different circumstances.

The headlamp unit swivels accordingly when cornering, to improve light spread on bends in the road.

Cornering lamps: At speeds of up to 25 mph (40 km/h), to provide improved visibility at intersections, the system switches on the lamp if it has received an input from the vehicle's turn signal. Only the lamp on the same side as the operating indicator illuminates. The lamp will self-cancel after 3 minutes of continuous operation.

WINDSHIELD WIPER DETECTION

This function only operates when **AUTO** is selected. The side lamps, tail lamps, and headlamps will switch on automatically if the windshield wipers are operated for more than 20 wipes. Once the windshield wipers are switched off, the side lamps and headlamps will automatically switch off 2 minutes later.

HIGH BEAM ASSIST

This feature automatically selects and deselects high beam, under specific conditions of road lighting and in the absence of other vehicle's lights. The system is only active when the ambient light drops below a predetermined level.

This function is only active if the lighting switch is in the **AUTO** position and the lighting control is in the central position.

The system will only activate when the vehicle's speed exceeds 25 mph (40 km/h). The system will deactivate when the vehicle's speed drops below 15 mph (24 km/h).

***Note:** High beam assist does not operate when Reverse (R) gear is selected.*

To manually select high beam, move the lighting control to the high beam position as normal. To return to High beam assist, move the lighting control back to the central position.