

## PORTABLE MEDIA CONNECTIONS

Portable media devices can be connected to the front media hub, located in the cubby box.

Compatible portable devices include:

- USB mass storage devices (e.g., a memory stick). Devices must use FAT or FAT32 file format.
- iPod® (iPod Classic, Touch, Nano, and iPhone® are supported - full functionality for older devices cannot be guaranteed). iPod Shuffle functionality cannot be guaranteed.
- Auxiliary device (personal audio, MP3 players, all iPods).

**Note:** Auxiliary devices have no Touch screen control.

If you are connecting an iPod, mass storage, or **Bluetooth®** device, use the Touch screen to operate and search for the device. Many of the controls are similar to those available for CD play.

### **NOTICE**

*Please disconnect your iPod when leaving the vehicle. Failure to do so may result in the iPod battery discharging.*

**Note:** The Audio system will play MP3, WMA, and AAC files.

To maximize playback quality, it is recommended that lossless compression is used for any media files on USB or iPod. Failing this, it is recommended that compressed files utilize a minimum bitrate of 192 kb/s (a higher bitrate is strongly recommended).

**Note:** iPod and iPhone are registered trademarks of Apple Inc., registered in the U.S. and other countries.

**Note:** Some MP3 players have their own file system that is not supported by this system. To use your MP3 player, you must set it to **USB Removable Device** or **Mass Storage Device** mode. Only music that has been added to the device in this mode can be played.

**Note:** If the USB cable is connected (e.g., to charge the device) to the vehicle, while an iPod is playing music via **Bluetooth**, the **Bluetooth** connection will be disabled. To continue listening to music from the iPod, select **iPod** mode.

## CONNECTING A DEVICE

### **⚠ WARNING**

**Make sure that any auxiliary devices are stored securely while the vehicle is in motion. Any loose objects are potential hazards during sudden manoeuvres, emergency braking situations or accidents.**

### **NOTICE**

*Do not place any item connected to the auxiliary input socket or the auxiliary power socket on the seats, carpets, or other upholstery. The heat generated by these devices may cause damage to the vehicle and, in some extreme cases, a fire.*

### **NOTICE**

*Read the manufacturer's instructions for any device, before it is connected to the Audio system.*

### **NOTICE**

*Always refit the rubber cover when a portable device is not plugged in. This prevents damage to the sockets. The cover is not waterproof.*