

# Navigation system

When **On** is selected, **Easy Route** changes the calculation parameters of **Route 3** in order to reduce:

- Junctions.
- Turns.
- Turns that cross traffic.
- The priority of minor roads.
- Complex junctions and maneuvers.

## LEARN ROUTE

In **Route options**, **Learn Route** can be turned **On** or **Off**.

When **On** is selected, if you make the same deviation from the proposed route 3 times, then the system will memorize the deviation and offer that as the normal route from then on. Select **Reset all routes** to delete any learned routes and return to the default settings.

## VOICE GUIDANCE

To turn voice guidance on or off but maintain route guidance, proceed as follows:

1. Touch **Nav Menu** on the navigation screen.
2. Touch the **Route voice guidance** soft key. The soft key will be highlighted when voice guidance is enabled.

## CANCEL ROUTE GUIDANCE

To cancel route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Cancel guidance** soft key.

## QUICK POI SELECTION

1. Touch the map to display the additional options.
2. Touch the **Point of interest** (POI) soft key.
3. The screen shows 6 suggested categories, 5 of which can be selected as quick Points Of Interest (POIs).
4. Select a Quick POI category, or touch **More** to see further POIs. Touch **Ok** to confirm a selection.
5. The map with the POI icon(s) is displayed. Scroll the map to the POI icon, then touch **Set destination** to set and calculate the route.
6. Touch **GO** to start the trip.

## RESTORE SYSTEM DEFAULTS

From the **Nav menu**, select **Nav-setup**. If you have made any changes to the system's default settings, use this menu to restore the original settings.

## FAVORITES

This enables you to manage destinations such as, place of work, home, favorite restaurant.

From the favorites sub-menu in Stored locations, you can save up to 400 stored favorites.

Use favorites to add your home address as a stored favorite:

1. From the **Nav menu**, touch **More...** and select **Stored locations**.
2. Touch **Favorite**.
3. To store a favorite, select **Add** from the sub-menu.
4. Select any destination entry method and confirm the desired location.