


## TOUCH SCREEN HOME MENU

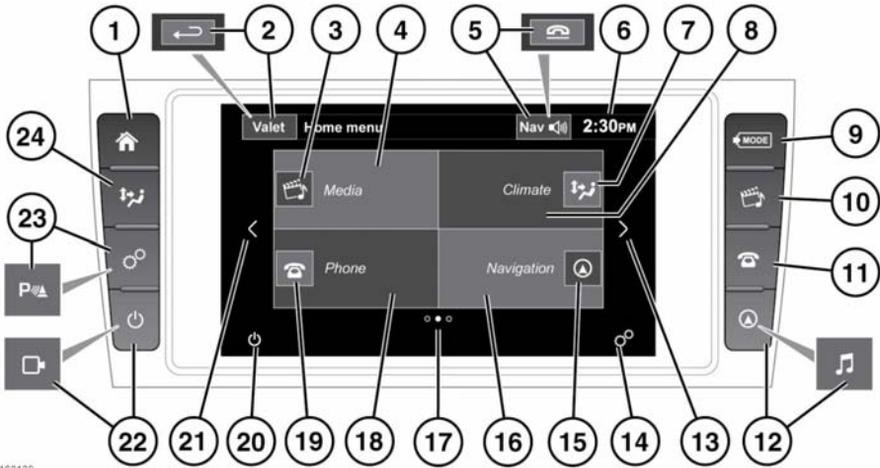

E168139

### **WARNING**

Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

### **NOTICE**

Always run the engine during prolonged use of the Touch screen. Prolonged use will cause the battery to discharge.

### **NOTICE**

Do not use excessive pressure when selecting items on the Touch screen.

### **NOTICE**

Avoid spilling or splashing liquids onto the Touch screen.

The **Shortcuts Menu** is the next screen to the left of the **Home menu** screen. Use the **System settings** menu to enable/disable, select or change, which vehicle features are displayed on the **Shortcuts Menu** screen. See **68, SYSTEM SETTINGS**.

The **Extra features** menu is the next screen to the right of the **Home menu** screen. See **69, EXTRA FEATURES**.

1. Press to display the **Home menu** screen.

**Note:** The amount of features displayed on the **Home menu** screen, is dependent on the vehicle's specification.

**Note:** Each feature has a smaller soft key, which allows functional operation of the feature, dependent on the feature's current status (e.g., play, pause, etc.).

2. Touch to select **Valet** mode. During menu mode, the icon is changed to the Back icon: touch to return to the previous screen.
3. **Media** soft key: Touch to carry out the following operations:

- CD, Bluetooth and USB: Alternate between play and pause
  - DVD in normal play: Short press to pause, or a long press to activate slow play.
  - DVD in slow play or paused: Activate normal play.
- 4. Media menu:** Touch (anywhere outside of the media soft key) to display the **Media** menu screen. See **107, AUDIO/VIDEO CONTROLS**.  
Dependent on the status of the current media selections, this may also display:
- File and status information for the current media selection.
  - Audio icon/information (e.g., news, AM/FM, album/song title, etc.).
- 5.** While the Navigation system is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed to a phone icon: touch to end a call.
- 6.** Time display: Touch to adjust the time/date.
- 7. Climate** soft key: Displays the current heating and ventilation distribution settings.
- 8. Climate** menu: Touch (anywhere outside of the climate soft key) to display the **Climate** menu screen.  
Dependent on the status of the current Climate settings and previous selections, this may also display:
- The driver and passenger temperature settings or the system status.
  - The external temperature.
- 9.** Press repeatedly to scroll through all of the media modes.
- 10.** Press to display the **Media** menu screen.
- 11.** Press to display the **Phone** menu screen.
- 12.** Press to display the **Navigation** menu screen.
- 13.** Touch to navigate to the right of the currently displayed screen.
- 14.** Touch to select the **Setup** menu. See **68, TOUCH SCREEN SETUP**.
- 15. Navigation** soft key: Touch to carry out the following operations:
- When no route guidance is selected: Access the **Destination entry menu**.
  - When route guidance is selected: **Cancel route guidance**.
- 16. Navigation** menu: Touch (anywhere outside of the navigation soft key) to display the **Navigation menu** screen. See **139, MAIN MENU**.  
This may also display the following:
- When no route guidance is selected: The vehicle's current location is shown.
  - When route guidance is selected: The location of the current destination, the destination/waypoint icon, Expected Time of Arrival (ETA) and the time and distance to the current destination/waypoint, are shown.
  - Navigation icons (e.g., destination entry, cancel guidance, etc.).
- 17.** Screen position indicator, for the currently displayed screen.
- 18. Phone** menu: Touch (anywhere outside of the phone soft key) to display the **Phone** menu screen. See **126, TELEPHONE SYSTEM OVERVIEW**.  
This may also display the following:
- The currently connected phone's name and network, or the phone's pairing status.
  - Phone icons (e.g., do not disturb, battery status, signal strength, Bluetooth, voicemail).