

You can connect multiple devices simultaneously to the portable media interface and switch between them using the Touch screen. Select **iPod**, **USB**, **Bluetooth**, or **AUX**, to switch between modes.

The device docked first will remain the active device until you choose to change.

If, after changing to the newly-docked device, you change back to the first device, play will resume at the point you left it (USB and iPod only).

**Note:** *You cannot use a USB hub to connect more than one USB device to the audio unit.*

**Note:** *Devices connected to the iPod and USB ports will be charged, but devices that are fully discharged will not play.*

**Note:** *Options, such as **Repeat** and **Shuffle**, relate to the device currently playing; they will not apply to any subsequent device.*

## PAIRING AND CONNECTING USING THE MEDIA PLAYER

For further information on **Bluetooth®** wireless technology devices, see **127, BLUETOOTH® INFORMATION**.

**Note:** *The process of pairing and connecting your media device with the vehicle, using the media device, will vary depending on the type of media device.*

1. Switch on the ignition and make sure that the Touch screen is active.
2. From the **Home menu**, select **Audio/Video**, then **My music/Source**, followed by **Bluetooth**.
3. A menu will appear. Select **Change Device**, followed by **Search new**.
4. Select the **Device to vehicle** option.

**Note:** *The vehicle's Bluetooth system is only discoverable for 3 minutes.*

5. Using the media device, search for Bluetooth devices. On some media devices, this is referred to as a new paired device. See your media device's operating instructions for further information.
6. When the vehicle's Bluetooth system is discovered, follow the on-screen instructions. Select **Yes** when prompted, to confirm the pairing. Either your device or the vehicle's system will ask for a PIN (Personal Identification Number). When prompted, enter a PIN of your choice and select **OK** to confirm.
7. Enter the same PIN into the other device.
8. Once your device is paired and connected to the system, a confirmation message will be displayed, before switching to the **My music**, Bluetooth screen.

**Note:** *Some media players do not automatically connect and need to be manually connected via the device or by using the **Change device** option.*

## PAIRING AND CONNECTING USING THE TOUCH SCREEN

For further information on **Bluetooth®** wireless technology devices, see **127, BLUETOOTH® INFORMATION**.

1. Switch your device's Bluetooth connection on. Make sure that it is in Bluetooth discoverable mode, sometimes referred to as find me mode (see your device's operating instructions for more information).
2. Switch the ignition on and make sure that the Touch screen is active.
3. From the **Home menu**, select **Audio/Video**, then **My music/Source**, followed by **Bluetooth**.