


Note: If Park assist senses that other vehicles are too close on either side to perform a parking manoeuvre, a space will be rejected, even if it is large enough for the vehicle. The driver retains the option to switch Park assist off and attempt the manoeuvre manually.

For assistance in exiting a parking space, select Parking exit.


For Parking exit to operate correctly, your vehicle must be parked in a space where other vehicles or objects are either:

- Parked in front of your vehicle.
- Parked in front and behind your vehicle.

Note: The Parking exit feature will only operate when your vehicle has been parallel parked. Parking exit will not manoeuvre your vehicle from a perpendicular parking space.

 Do not perform a Parking exit manoeuvre until the message **Drive forward with care** is displayed in the Message centre.

For all 3 Park assist features, follow the instructions displayed in the Message centre until the parking or exiting manoeuvre has been completed.

 Although the vehicle takes control during the parking or exiting manoeuvre, the driver must maintain full control of the accelerator and brake pedals throughout.

Note: If the vehicle's speed exceeds 5 km/h (3 mph) during the manoeuvre, Park assist will display a message until the vehicle's speed decreases to less than 5 km/h (3 mph). If the vehicle's speed exceeds 7 km/h (4 mph), Park assist will deactivate.

If a system fault is detected, a continuous tone will sound and a message will be displayed in the Message centre. Consult a Dealer/Authorised Repairer.

PARK ASSIST LIMITATIONS



Park assist is a supplement to, and not a replacement for, good observation and a safe driving style. It is the driver's responsibility, at all times, to make sure that reversing manoeuvres are carried out safely.

Park assist may provide inaccurate results if:

- The size or shape of the parking space changes after it was measured.
- There is an irregular kerb alongside the parking space or the kerb is covered with leaves, snow, etc.
- The vehicle is being used to transport a load that extends beyond the perimeter of the vehicle.
- The vehicle had a repair or alteration that was not approved by a Dealer/Authorised Repairer.
- The vehicle has been fitted with non-approved wheels or tyres, or there is significant tyre wear.
- One of the parked vehicles has an attachment at a raised height such as a flat bed truck, snow plough, or cherry picker.
- The parking space is located on a corner or curve.
- The sensors are dirty or covered in mud, ice, or snow.
- The weather is foggy, raining, or snowing.
- The road surface is bumpy such as gravel.
- A tow bar or trailer hitch is fitted.
- A trailer is connected.
Note: If a trailer is connected to a Jaguar approved trailer socket, the Park assist system will be disabled.
- It encounters an obstruction that is thin or wedge shaped.