


## CLIMATE CONTROL

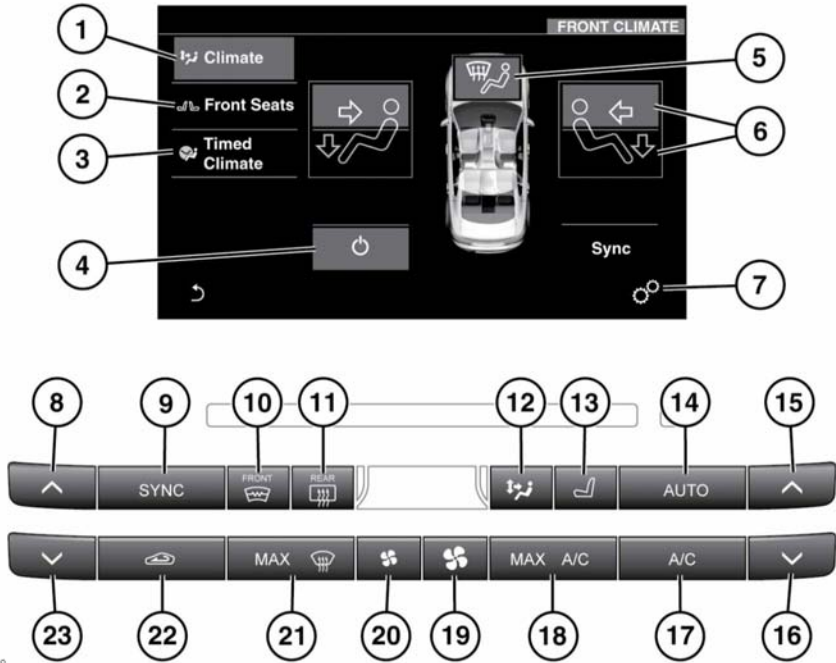

E167920

1. **Climate:** To access the **FRONT CLIMATE** screen, touch **Climate** on the **HOME** menu screen. See **76, TOUCH SCREEN CONTROLS**.
  2. **Front Seats:** Touch to select the **Climate seats** settings screen.
  3. **Timed Climate:** Touch to select the **TIMED CLIMATE** settings menu. See **82, TIMED CLIMATE CONTROL**.
  4. Touch to switch the Climate control system off.
  5. Windscreen air distribution: Touch to switch on/off.
  6. Air distribution: Touch the upper (face distribution) or lower (body/feet distribution) area to select.
  7. Touch to select the **General settings** menu, then to access the **Climate** settings menu.
  8. Press to increase the temperature for the front left side of the vehicle.
  9. Press to synchronise the driver and front passenger climate zone settings.
  10. Heated front screen: Press to switch on/off.
  11. Heated rear screen: Press to switch on/off.
- Note:** The heated front and rear screens, will operate only when the engine is running.