


## CLIMATE CONTROL

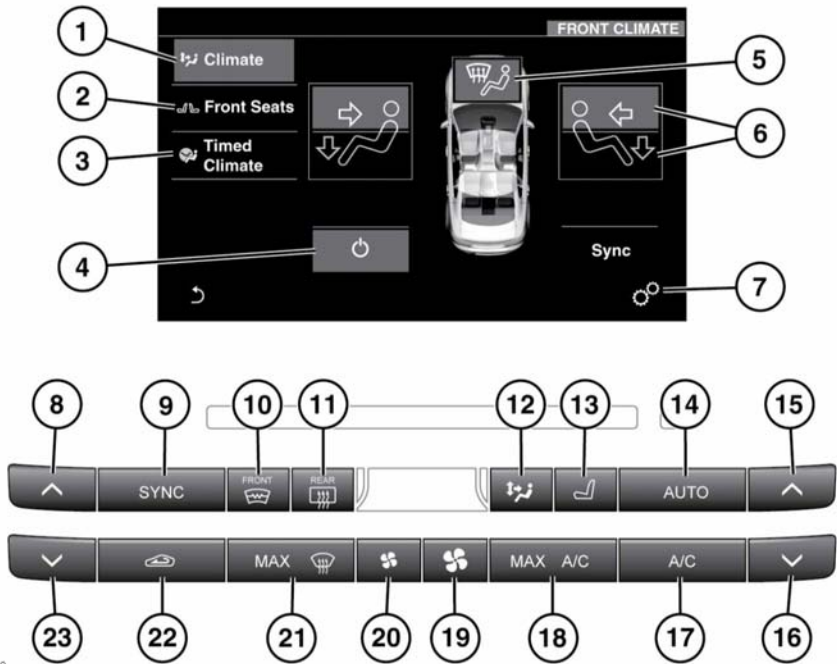

E167920

- 1. Climate:** To access the **FRONT CLIMATE** screen, touch **Climate** on the **HOME** menu screen. See **76, TOUCH SCREEN CONTROLS**.
  - 2. Front Seats:** Touch to select the **Climate seats** settings screen.
  - 3. Timed Climate:** Touch to select the **TIMED CLIMATE** settings menu. See **82, TIMED CLIMATE CONTROL**.
  - 4.** Touch to switch the Climate control system off.
  - 5. Windscreen air distribution:** Touch to switch on/off.
  - 6. Air distribution:** Touch the upper (face distribution) or lower (body/feet distribution) area to select.
  - 7.** Touch to select the **General settings** menu, then to access the **Climate** settings menu.
  - 8.** Press to increase the temperature for the front left side of the vehicle.
  - 9.** Press to synchronise the driver and front passenger climate zone settings.
  - 10. Heated front screen:** Press to switch on/off.
  - 11. Heated rear screen:** Press to switch on/off.
- Note:** The heated front and rear screens, will operate only when the engine is running.