

# Exterior lights

- Dimly lit road users, for example, cyclists or pedestrians.
- Adverse weather conditions, for example, rain or fog.
- Dirty or obscured sensor.
- Dirty, damaged or misted windscreen.
- Oncoming vehicles partially obscured by a central motorway barrier.

**Note:** The system cannot be relied upon to activate or deactivate high beam in all possible circumstances. It remains the driver's responsibility to use the headlamps correctly at all times.

**Note:** Make sure that the forward-facing sensors on the back of the rear-view mirror are not blocked or obstructed.

## WINDSCREEN WIPER DETECTION

If Auto lamps is selected and the windscreen wipers are switched on for 20 seconds or more, the side lamps, tail lamps and headlamps will switch on automatically. When the wipers are switched off, the lamps will automatically switch off 2 minutes later.

## HEADLAMPS - CONDENSATION

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.

## HEADLAMPS - DRIVING ABROAD

The headlamp beam pattern is suitable for driving on either side of the road. There is no need for any mechanical adjustment or external decals.

## HEADLAMP LEVELLING



E164607

Use the rotary control to set the Halogen headlamps position to the correct level for the current vehicle load. This is located on the driver's side lower fascia.

**Note:** Not available for all markets.

| Vehicle load                       | Switch position |
|------------------------------------|-----------------|
| Driver only                        | 0               |
| Driver and front seat passenger    | 1               |
| Driver and passengers in all seats | 2               |
| Maximum gross vehicle weight       | 3               |
| Maximum rear axle load             | 3               |

## ADAPTIVE FRONT LIGHTING SYSTEM (AFS)

With the headlamps on, the AFS will adjust the beams when cornering, to provide an improved illumination in the direction of travel.

The AFS is deactivated when:

- Reverse (R) gear is selected.
- The vehicle is stationary.

If a system fault is detected, the headlamps will attempt to move to the central position and then remain stationary. The AFS warning indicator will illuminate to indicate that a fault is present. See **53, ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)**.

If the warning lamp illuminates, contact a Dealer/Authorised Repairer as soon as possible.