


Front seats

ELECTRIC SEATS

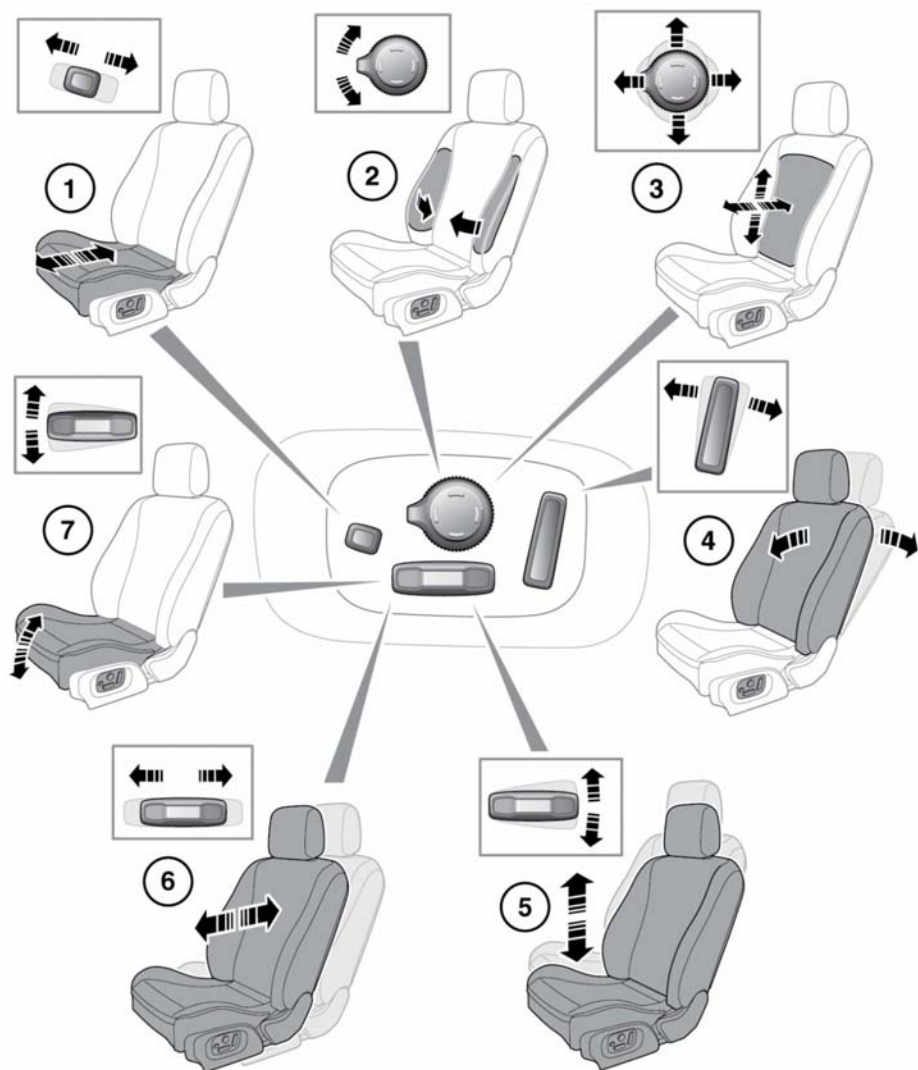

E164795



Do not adjust the seat while the vehicle is moving. Doing so could cause loss of vehicle control and personal injury.

1. Cushion length adjustment.
2. Bolster adjustment (inflate/deflate).

3. Lumbar support adjustment.

- Press the top of the button to raise.
- Press the bottom of the button to lower.
- Press the middle front of the button to inflate.
- Press the middle rear of the button to deflate.

4. Seatback angle adjustment.

5. Height adjustment.

6. Forward and rearward adjustment.

7. Cushion front tilt adjustment.

To adjust the seats, the Smart key must be in the vehicle and the ignition switched on.

If an obstruction is encountered while the seat is in motion, the seat will stop moving and further movement will be restricted until reset.

To reset the seat:

- 1.** Remove the obstruction.
- 2.** Adjust the seat to the point where the movement was restricted.
- 3.** Press and hold the switch for at least 2 seconds to override the restriction.