



INCONTROL WI-FI

InControl Wi-Fi allows connection to the internet using a high speed 3G connection.

A SIM card must be inserted into the SIM card holder. The SIM card holder is located in the luggage compartment.

The SIM card reader utilizes a 'Mini-SIM' interface. If your SIM card is a different size, for example, 'Micro-SIM', an adaptor or replacement SIM card will be required.

Note: If your SIM card has previously been used in a mobile phone, or any other device, and a Personal Identification Number (PIN) has been set, remove the PIN before using the SIM card in the vehicle.

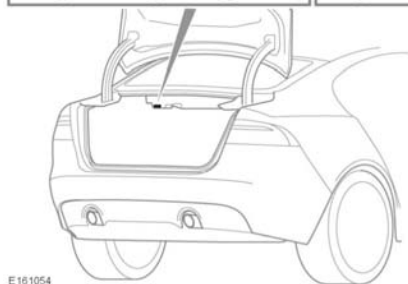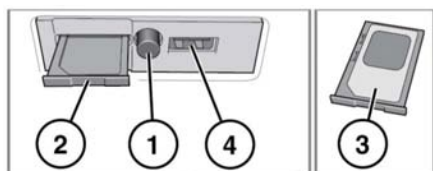

E161054

To install a SIM card, open the luggage compartment lid for access, then press the button (1) to release and remove the SIM card holder (2).

Insert the SIM card into the holder, as indicated (3).



Make sure the SIM card is located correctly in the card holder. Failure to do so may damage the SIM card or SIM card reader.

Refit the SIM card holder, as indicated (2). Gently push back to fully close.

Close the luggage compartment lid.

Note: The USB port (4) is for service use only.

Wi-Fi settings

InControl Wi-Fi can be switched on/off using the Touch screen. From the **Home menu** screen, navigate to the **Extra features** menu screen/s, then select **WiFi Hotspot**. See the Touch screen section of this handbook for more information.

The **WiFi Hotspot** screen will display the Wi-Fi network ID and password. It also allows you to adjust basic system settings. More advanced settings, including changing your security password and Access Point Name (APN) configuration, can be carried out by accessing the **Wi-Fi Hotspot Router** menu on your mobile device.

To access the **Wi-Fi Hotspot Router** menu:

- From the **WiFi Hotspot** screen, select **Help**.
- The Wi-Fi hotspot router address will be displayed on the Touch screen. Copy this address into your mobile device's internet browser.

The **Wi-Fi Hotspot Router** menu will now be displayed on your mobile device. Log in using the details displayed on the **Help** screen.

Wi-Fi icons



E154367

1. 3G mobile phone network connectivity.