



E196657

To Single lock the vehicle, touch only the keyless locking sensor (1) once, without grabbing the door handle. The hazard warning lamps will flash once, as confirmation (in some markets, an audible warning will sound).

To Double lock the vehicle, touch only the keyless locking sensor (1) twice within 3 seconds. The hazard warning lamps will flash twice (with a long second flash), and (if enabled) an audible lock warning will sound.

**Note:** Do not place your fingers around the back of the door handle while touching the keyless locking sensor. Doing so will prevent the vehicle from locking, as the keyless unlocking sensor is located on the inner surface of the door handle.

**Note:** The **Audible Lock Warning** can be enabled/disabled via the **Vehicle Set-up** menu. See **47, INSTRUMENT PANEL MENU**.

**Note:** Keyless locking will only activate if all of the doors, the bonnet, and the luggage compartment are closed securely and the Smart key is outside of the vehicle.

## FULL ALARM



**No modifications or additions should be made to the alarm system. Such changes could cause this system to malfunction.**

Double lock the vehicle to activate the Full alarm system. See **13, DOUBLE LOCKING** and **14, KEYLESS LOCKING**.

The Full alarm system is the maximum level of security for the vehicle. It consists of:

- The Perimeter alarm.
- A Battery-backed sounder.
- A Tilt sensor.
- An Intrusion sensor.

## PERIMETER ALARM

Single lock the vehicle to activate the Perimeter alarm system. See **13, SINGLE LOCKING** and **14, KEYLESS LOCKING**.

The Perimeter alarm system is the minimum level of security for the vehicle.

## BATTERY-BACKED SOUNDER

In certain markets, a separate Battery-backed sounder is fitted. This device will sound the alarm if the vehicle's battery or the alarm sounder is disconnected when the security system is armed.

## DEACTIVATING THE ALARM WHEN TRIGGERED

If the alarm has been triggered, it can be deactivated by any one of the following methods:

- Pressing the unlock button on the Smart key.
- Opening a door using Keyless entry.
- Pressing the **START/STOP** button with a valid Smart key present.

The cause of the last alarm activation can be displayed in the Message centre via the **Vehicle Info** and **Last Alarm** menus. See **47, INSTRUMENT PANEL MENU**.