DAB RADIO CONTROLS



E171499

- 1. Stations: Touch to select the list of available stations for the selected waveband.
- 2. Source: Touch to select the media source list.
- Status icons: Showing the connected phone's battery level and network signal strength. The Traffic Announcement (TA) icon will also be displayed, if TA is currently switched on. See 144, AUDIO SETTINGS.
- 4. Seek down: Touch to auto-seek down the frequency to the next radio station.
- 5. Seek down: Touch to auto-seek down the frequency to the next radio ensemble.
- 6. The selected radio ensemble name.
- 7. The selected radio station name.
- 8. Seek up: Touch to auto-seek up the frequency to the next radio ensemble.
- **9.** Seek up: Touch to auto-seek up the frequency to the next radio station.

The seek buttons on the steering wheel can also be used to change to the next or the previous frequency.

- 10. Waveband image (if available).
- **11.** Information from the selected station.
- 12. Station presets:
 - Touch and release to tune to the radio station stored on that preset.
 - Touch and hold to store the current radio station on that preset.
- **13.** Touch to scroll through the preset stations.
- Touch to select the General settings menu. Select Media and then Radio, where the following features can be activated/deactivated:
 - Radiotext.
 - DAB L-Band.