


DAB RADIO CONTROLS

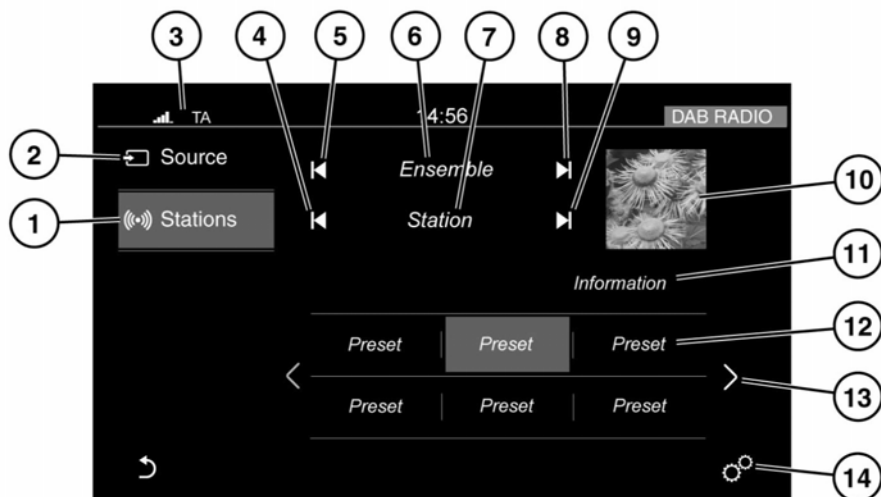

E171499

1. **Stations:** Touch to select the list of available stations for the selected waveband.
2. **Source:** Touch to select the media source list.
3. **Status icons:** Showing the connected phone's battery level and network signal strength. The Traffic Announcement (**TA**) icon will also be displayed, if TA is currently switched on. See **144, AUDIO SETTINGS**.
4. **Seek down:** Touch to auto-seek down the frequency to the next radio station.
5. **Seek down:** Touch to auto-seek down the frequency to the next radio ensemble.
6. The selected radio ensemble name.
7. The selected radio station name.
8. **Seek up:** Touch to auto-seek up the frequency to the next radio ensemble.
9. **Seek up:** Touch to auto-seek up the frequency to the next radio station.

The seek buttons on the steering wheel can also be used to change to the next or the previous frequency.

10. Waveband image (if available).
11. Information from the selected station.
12. **Station presets:**
 - Touch and release to tune to the radio station stored on that preset.
 - Touch and hold to store the current radio station on that preset.
13. Touch to scroll through the preset stations.
14. Touch to select the **General settings** menu. Select **Media** and then **Radio**, where the following features can be activated/deactivated:
 - **Radiotext.**
 - **DAB L-Band.**