

Note: Up to 3 different exterior mirror positions can be stored and recalled using the Driving position memory feature. See 20, **DRIVING POSITION MEMORY**.

MIRROR DIP WHEN REVERSING

The mirrors can be configured so that when Reverse (**R**) gear is selected, the passenger's door mirror is automatically adjusted to provide an improved viewing angle for reversing.

The exact dipped position can be adjusted using the joystick control, when the mirror is dipped. The next time **R** is selected, the newly adjusted position will be selected.

When the gear selector is moved out of **R**, or if the vehicle's speed exceeds 12 km/h (7.5 mph) while reversing, the mirror will return to its previous position.

Reverse-dip Mirror can be enabled/disabled via the **Vehicle Set-up** menu. See 47, **INSTRUMENT PANEL MENU**.