

# Steering wheel

## ENTRY AND EXIT MODE



E 166543

With the electric steering column control in the **AUTO** position, the steering column will move to provide easier entry and exit from the vehicle.

On opening the driver's door, the system will raise the steering column to the highest position, assisting with exit from the vehicle. When the driver's door is closed and the ignition switched on, the system will return the steering column to the previous position.

**Note:** If the steering column is adjusted during entry or exit operation, automatic movement will stop.

To prevent automatic movement of the steering column, turn the control clockwise to the alternative position.

**Note:** If the steering column switch is moved away from **AUTO** when the steering column is in the exit position, the steering column will move back to its previous position when the driver's door is closed and the ignition is switched on.

## HEATED STEERING WHEEL



E 149544

To activate the heated steering wheel, press the switch. Press again to switch off.