

engine oil level.....	204
fuel system.....	186
fuse box (passenger compartment).....	218
jump starting.....	212
label locations.....	245
lubricants and fluid specifications.....	248
luggage compartment fuse box.....	219
oil top up.....	205
paintwork repair.....	200
polishing.....	201
removing grease and tar.....	201
removing stains.....	202
running-in.....	183
smart key battery.....	12
sunroof wind deflector.....	201
tyre repair kit.....	231
tyre repair procedure.....	232
using a starting aid.....	212
washer fluid level.....	209
weekly checks.....	184
Manual seats.....	20
Map screen	
navigation system.....	167
Media controls.....	143
Message centre display units.....	49
Methanol.....	175
Minor paintwork repairs.....	200
Mirrors	
blind spot monitor.....	67
closing vehicle sensing.....	68
sensors.....	69
dip when reversing.....	66
exterior mirrors.....	65
Misfuel device.....	179
Modes	
driving.....	135
standard.....	135
winter.....	136
Mpg.....	181

N

Navigation	
emergency contacts.....	169
license.....	170

map screen.....	167
menu.....	166
operating.....	164
overview.....	164
points of interest (POI).....	169
SD card.....	164
set a selected destination.....	169
settings.....	167
guidance.....	168
soft key icons.....	170
terms and conditions.....	170
voice commands.....	153
where to?.....	168

O

Obstructing the airbag.....	41
Occupant safety	
child seat tether straps.....	38
recommended child seats.....	36
seat belt checks.....	31
seat belt pre-tensioners.....	32
seat belt reminder warning.....	31
seat belt safety.....	30
seat belts warning lamp.....	52
using seat belts.....	29
Octane rating.....	174
petrol.....	174
Oil	
engine oil specification.....	205
filler locations.....	203
specification.....	248
top up.....	205
used engine oil.....	186
Opening the bonnet.....	186
Oversteer.....	108
Overview	
InControl mobile technology.....	159
Owner maintenance.....	184

P

Paddle shift.....	106
Paintwork	
cleaning.....	200