

- Introduction
 - instructional videos.....3
- Intrusion sensor.....16
- ISOFIX and i-Size anchor points.....36
- J**
- Jump starting
 - connecting a starting aid.....212
 - connecting jump leads.....210
- K**
- Keyless entry.....8
- Keyless locking.....14
- L**
- Label locations.....245
- Lamps.....56
 - auto lamps wiper detection.....58
 - bulb changing.....187
 - bulb specification.....254
 - condensation.....58
 - rear lamp removal.....194
 - test.....51
 - TPMS warning lamp.....54
 - warning lamps.....51
 - xenon headlamps.....188
- Lane departure warning.....141
- Lane departure warning lamp (green).....54
- Lane departure warning lamp (red).....52
- Leather cleaning.....201
- Levelling
 - headlamps.....58
- License
 - navigation.....170
- Lighting
 - ambient lighting.....61
 - interior lamps intensity.....61
 - interior lamps locations.....60
 - stealth mode.....61
- Limp home mode.....106
- Load securing.....87
- Locking
 - automatic relocking.....16
 - confirmation.....14
 - door locks and release levers.....13
 - double locking.....13
 - drive away.....9
 - emergency locking.....17
 - global closing.....14
 - in an emergency.....17
 - keyless.....14
 - mislock.....14
 - security sensor fault.....16
 - single.....13
 - with the emergency key.....17
- Locking wheel nuts.....239
- Low fuel warning lamp.....53
- Low oil pressure warning lamp.....51
- Lubricants specifications.....248
- Luggage compartment
 - anchor points.....87
- M**
- Maintenance
 - arduous driving conditions.....185
 - brake fluid level.....207
 - bulb changing.....187
 - rear lamp removal.....194
 - bulb specification.....254
 - capacities.....253
 - changing a fuse.....215
 - checking tyre pressure after a repair.....233
 - cleaning
 - alloy wheels.....200
 - exterior.....200
 - glass.....200
 - interior.....201–202
 - leather.....201
 - rear screen.....201
 - sensors and cameras.....200
 - the engine compartment.....200
 - closing the bonnet.....186
 - clutch fluid level.....207
 - daily checks.....184
 - diesel particulate filter (DPF).....184
 - engine compartment fuse box.....215
 - engine coolant level.....206